User manual

ADMA

Version 2.1.3

Hardware V. 2.1 / Firmware V.2.4.4

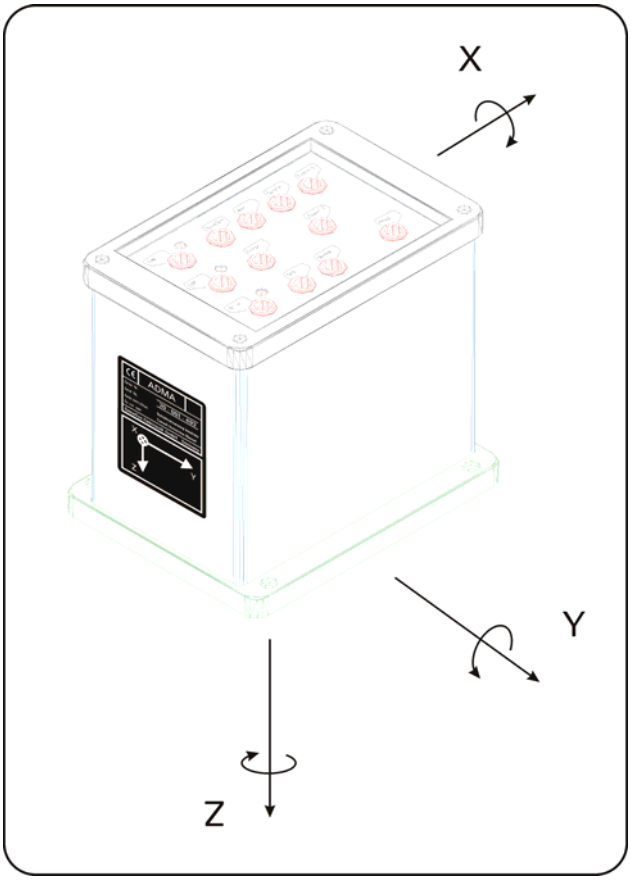

GeneSys Elektronik GmbH
Offenburg

Date: March 2006

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

Note

GENESYS ELEKTRONIK strives to maximize the accuracy of all its data and specifications, but cannot rule out the possibility of errors and reserves the right to future modifications without any prior notice.

GENESYS ELEKTRONIK is not obliged to maintain secrecy over any received material or other information in the absence of any corresponding agreements made with GENESYS prior to submission of such information.

GENESYS will gladly respond to enquiries and provide product details.

Copyright

Copyright @ 2006 GENESYS ELEKTRONIK GmbH. All rights reserved.
This entire user manual, or excerpts thereof, must not be reproduced, stored or transmitted in any manner – electronically, mechanically or otherwise – without the prior approval of GENESYS ELEKTRONIK GmbH.

Windows is a registered trademark of Microsoft Corporation.
DIAdem is a registered trademark of National Instruments.

Revision

Document revision 2.1.3
March 2006

Contact

GeneSys Elektronik GmbH
In der Spöck 10
D-77656 Offenburg

Phone: 0049-781-969279-30
Fax: 0049-781-969279-11

www.genesys-offenburg.de

TABLE OF CONTENTS

1. INTRODUCTION 5

2. SCOPE OF DELIVERY 5

2.1. ONLY ADMA 5
2.2. ADMA WITH INTERNAL / EXTERNAL GPS RECEIVER 6
2.3. ADMA WITH A GPS RECEIVER AND GPS BASE STATION 7

3. ADMA FUNCTION TEST ON A LABORATORY BENCH 9

3.1. GENERAL INFORMATION 9
3.2. SETUP AND CABLING 9
3.3. MODIFYING ADMA'S CONFIGURATION 10
3.3.1. Handling of the ADMA System Software (Help) 10
3.3.2. Loading configuration from the ADMA 11
3.3.3. Configuring measurement data transmission via the COM interface 12
3.3.4. Selection of data packets to be transmitted 13
3.3.5. External auxiliary systems 14
3.3.6. Parameter 15
3.3.7. Transmitting modified settings to ADMA 16
3.4. STARTING A MEASUREMENT 17
3.5. STATIC TEST 20
3.5.1. Transient condition of the Kalman filter 20
3.5.2. Check of system status 20
3.5.3. Check of the displayed orientation 22
3.5.4. Check of the displayed rotational speeds 23
3.5.5. Check of the displayed accelerations 24
3.5.6. Ending a measurement 24
3.6. DYNAMIC TEST 25
3.6.1. Test procedure and data display 25
3.6.2. Check of displayed rotational speeds 26
3.6.3. Check of displayed accelerations 27

4. INSTALLATION AND CABLING INSIDE THE VEHICLE 28

4.1. OPERATIONAL CONFIGURATIONS 28
4.2. INSTALLATION POINT 30
4.2.1. ADMA 30
4.2.2. External speed measuring system 30
4.2.3. GPS antenna 30
4.2.4. Modem and modem antenna 30
4.3. CABLING 31
4.3.1. ADMA in stand-alone mode (minimal configuration) 31
4.3.2. ADMA in stand-alone mode - optional connections 31
4.3.3. ADMA and external speed measurement 31
4.3.4. ADMA and GPS 32
4.3.5. ADMA and DGPS with a separate base station 33

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

5. SETUP TASKS ON THE VEHICLE 34

5.1. MODIFY THRESHOLD FOR STANDSTILL DETECTION 34
5.1.1. Max. rate at standstill 34
5.1.2. Max. velocity at standstill 35
5.2. MODIFY THRESHOLDS FOR QUALITY 35
5.2.1. Threshold for position quality 36
5.2.2. Threshold for Tilt quality 37
5.2.3. Enter geo. latitude and geo. longitude 37
5.3. COMPENSATING THE INSTALLATION POSITION 38
5.3.1. Virtual measuring point (point of interest) 40
5.3.2. External speed measuring system 40
5.3.3. GPS antenna 40
5.4. COMPENSATION OF INCORRECT INSTALLATION POSITION 41
5.4.1. Incorrect ADMA installation position 41
5.4.2. Horizontal compensation of incorrect ADMA installation position 41
5.4.3. Compensation of ADMA's vertical axis twist 41
5.4.4. Compensation of vertical-axis twist of a 2-axis speed sensor 41

6. CONFIGURING ADMA'S MEASUREMENT MODE 42

6.1. SYSTEM SETTINGS 42
6.2. STARTING A MEASUREMENT 42
6.2.1. Start a measurement above the main menu's item Start measurement in ADMA System Software 42
6.2.2. Start a measurement above the main menu's item Remote Start in ADMA System Software 42
6.2.3. Start a measurement above the Autostart mode 42
6.2.4. Start a measurement above a user specific tool 43
6.2.5. Start course 43
6.2.6. Prealignment 43
6.2.7. Transient phase of the Kalman filter 43

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

1. Introduction

This user manual serves as an aid in commissioning the ADMA gyro system.
The first part of the manual describes a routine for testing whether the ADMA gyro system's inertial sensors are operating without error. This function test is also a good way to become familiar with ADMA and to gain experience in setting up the ADMA. The second part of the manual describes a typical configuration of a test vehicle, including auxiliary sensors such as an external speed measurement system or a GPS.

2. Scope of delivery

2.1. Only ADMA

- The ADMA module
- A supply cable designated ADMA-Power, colour code red
- A communication cable designated ADMA-COM, colour code blue
- A communication cable designated ADMA-CAN, colour code green
- The configuration tool designated ADMA System Software
- Documentation (User manual, Technical Documentation and ADMA System Software)
- Transport case

Optional items:

- Event-In 1 - cable, colour code orange
- Event-In 2 - cable, colour code orange
- Sync Out - cable, colour code yellow
- Error Out – cable, colour code black
- Aux-Out – cable, colour code black
- ADMA Speed – cable, colour code grey
- ADMA Download – cable, colour code white
- Rescue case with replacement cable and download-software

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

2.2. ADMA with internal / external GPS receiver

- The ADMA or ADMA-G module
- A supply cable designated ADMA-DC In, colour code red
- A communication cable designated ADMA-COM, colour code blue
- A communication cable designated ADMA-CAN, colour code green
- The configuration tool designated ADMA System Software
- Documentation (User manual, Technical Documentation and ADMA System Software)
- Transport case for ADMA or ADMA-G
- GPS receiver (only by ADMA with external GPS-Receiver)
- GPS supply cable (only by ADMA with external GPS-Receiver)
- GPS communication cable (only by ADMA with external GPS-Receiver), colour code brown
- GPS rover antenna with cable (in case ADMA-G with, in case ADMA without, colour code brown)
- Magnetic base for GPS rover antenna with assembly adapter
- Documentation (GPS receiver)
- Transport case for GPS-Rover

Optional items:

- Event-In 1 - cable, colour code orange
- Event-In 2 - cable, colour code orange
- Sync Out - cable, colour code yellow
- Error Out – cable, colour code black
- Aux-Out – cable, colour code black
- ADMA Speed – cable, colour code grey
- ADMA Download – cable designated *Prog*, colour code white with programming adapter
- Wireless / GSM modem
- Wireless / GSM modem antenna with magnetic base and antenna cable
- ADMA-G modem connection cable, colour code brown (only by ADMA-G with internal GPS)
- GPS modem connection cable (only by ADMA with external GPS)
- Receiver enabling for WAAS
- Rescue case with replacement cable and download-software

2.3. ADMA with a GPS receiver and GPS base station

In the base station's all-weather design, the GPS receiver, wireless / GSM modem and associated cables are integrated into a housing, contrary to the basic GPS base design, which is though for operation in dry conditions as in buildings. In this case, only the antenna, communication and supply cables need to be plugged into the external connectors provided for this purpose.

- The ADMA or ADMA-G module
- A supply cable designated *ADMA-DC In*, colour code red
- A communication cable designated *ADMA-COM*, colour code blue
- A communication cable designated *ADMA-CAN*, colour code green
- The configuration tool designated *ADMA System Software*
- Documentation (User manual, Technical Documentation and ADMA System Software)
- Transport case for ADMA or ADMA-G
- GPS receiver (only by ADMA with external GPS-Receiver)
- GPS receiver enabling for RT2
- GPS supply cable (only by ADMA with external GPS-Receiver)
- GPS communication cable (only by ADMA with external GPS-Receiver), colour code brown
- GPS rover antenna with cable (in case ADMA-G with, in case ADMA without, colour code brown)
- Magnetic base for GPS rover antenna with assembly adapter
- Documentation (GPS receiver)
- Transport case for GPS-RoverGPS base receiver (by base station's all weather design integrated into a housing)
- GPS base supply cable (by base station's all weather design)
- GPS base power supply unit 220V (by basic design)
- GPS base communication cable
- GPS base antenna and cable
- Wireless / GSM modem (by base station's all weather design integrated into a housing)
- Wireless / GSM modem antenna and + antenna cable
- Connection cable from GPS base to Wireless/GSM modem (by basic design)
- Wireless/GSM modem power supply unit 220V (by basic design)
- Tripods for GPS base antenna (by base station's all weather design)
- Tripods for Wireless/GSM modem antenna (by base station's all weather design)
-
- GPS configuration software designated *GPS-Monitor*
- Documentation (on the GPS receiver and *GPS monitor* software)
- Transport case for GPS base

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

Optional items:

- Event-In 1 - cable, colour code orange
- Event-In 2 - cable, colour code orange
- Sync Out - cable, colour code yellow
- Error Out – cable, colour code black
- Aux-Out – cable, colour code black
- ADMA Speed – cable, colour code grey
- ADMA Download – cable designated *Prog*, colour code white with programming adapter
- Wireless / GSM modem
- Wireless / GSM modem antenna with magnetic base and antenna cable
- ADMA-G modem connection cable, colour code brown (only by ADMA-G with internal GPS)
- GPS modem connection cable (only by ADMA with external GPS)
- Receiver enabling for WAAS
- Rescue case with replacement cable and download-software

3. ADMA laboratory bench testing

3.1. General information

The routine described below is intended to test the functionality of the gyro system's inertial sensors, i.e. the accelerometers and gyroscopes. This function test is also a good way to become familiar with the ADMA and to gain experience in setting up the ADMA.

3.2. Setup and cabling

The following components should be prepared for the function test:

- ADMA
- *ADMA-Power* supply cable
- *ADMA-COM* communication cable
- A PC / laptop with the *ADMA System Software*

Connect the *ADMA-Power* cable's red-coded Lemo-plug to the *DC In* ADMA socket and turn on the power supply. Depending on system design, the nominal supply is 12, 24 or 42 VDC. The *DC In* LED should come on as a result.
Afterward, connect the *ADMA-COM* communication cable's blue-coded Lemo-plug to the *COM* ADMA-socket and the other end of the cable to the COM interface of your measurement data acquisition device (usually a PC or laptop). These connections are also depicted in the diagram below.

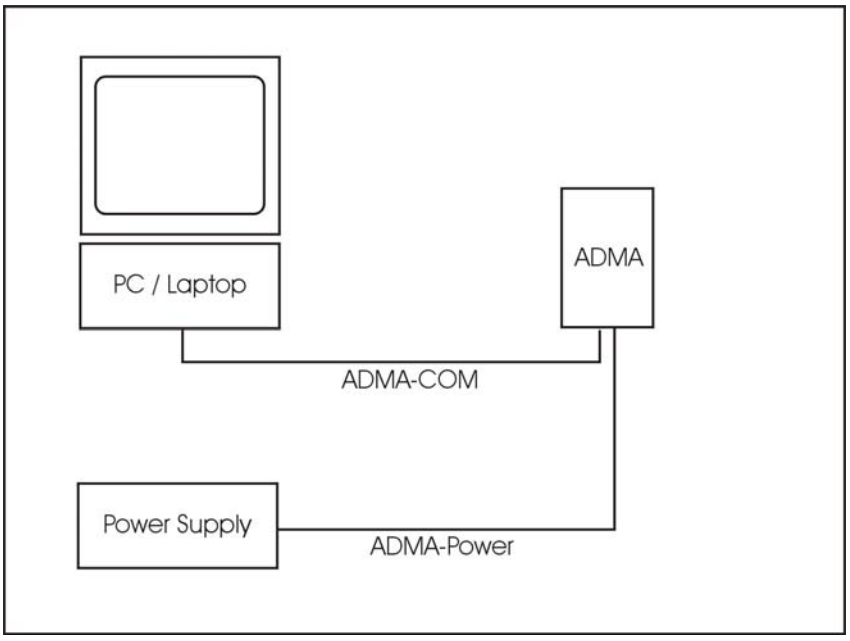

Figure 1 Setup an cabling

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.3. Modifying the ADMA's configuration

3.3.1. Handling of the *ADMA System Software* (Help)

For a better usability of the ADMA System Software, an interactive help has been implemented. With each parameter available in the configuration mode a hint will be displayed, and, if applicable, an image, to asure that the most important informations are available for the user.

To have the parameter hint displayed, set the focus to the appropriate control element. In case of pure keyboard editing, you can tab (shift + tab) through the control elements. In case of option control elements simply use the arrow keys.
If you prefer working with a mouse or touchpad, the focus can be set with a right button click. This only displays the hint of an option control element or a checkbox, thus having focus, but not changing it's state. To activate or deactivate these control elements please use the left mouse button.

If the displayed information isn't sufficient, you can obtain further information by clicking on the *Help*-button on the very buttom of the window to open the *Technical documentation.* Please note, that a PDF-reader has to be installed.

To make fast and efficient working with ADMA System Software possible, the most important functions are available via *Hotkeys*. An overview listing all preset hotkeys is given at the main menu's item *Hotkeys*. Please note, that the Hotkeys are not available all the time.

3.3.2. Loading configuration from the ADMA

Certain settings need to be performed in order to conduct the function test. For this purpose, it is necessary to check and possibly modify the configuration saved in the ADMA system. To view and change these configuration parameters, start the *ADMA System Software* and select the menu option *Configuration*.

Figure 2 Menu of the ADMA System Software

The following dialog will open, where you can choose the source to load the configuration data from. For function testing the settings should be loaded from the ADMA. Please choose the option *Load settings from ADMA* and confirm with the button *Load / Generate settings*.

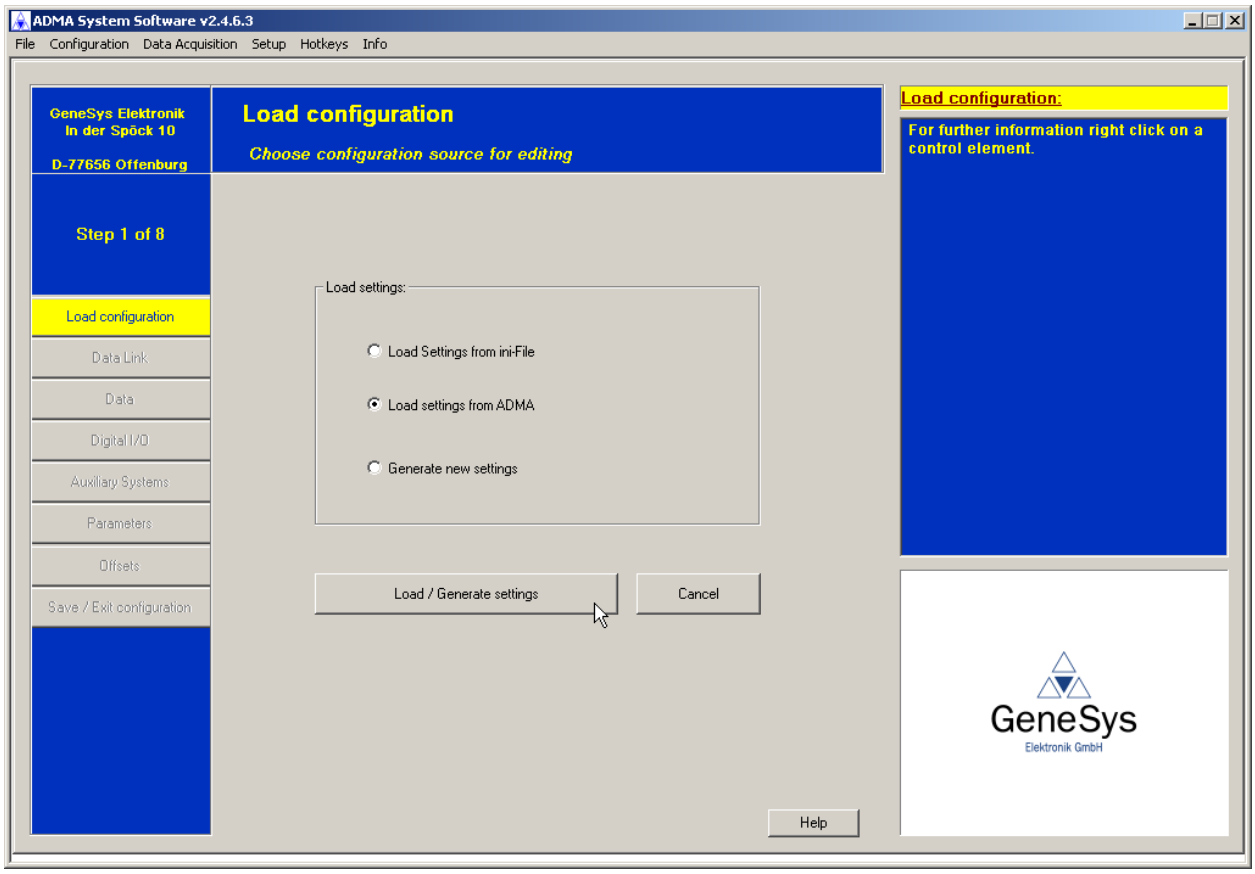

Figure 3 Dialog: Load configuration

The ADMA system software then starts to read out the ADMA's configuration data. Once this process is complete, the loaded data is displayed.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.3.3. Configuring measurement data transmission via the COM interface

The dialog *Data Link* appears. For testing, please click on the *COM* option.
This sets up the ADMA to transmit the data via the COM port. The ADMA System Software is capable of receiving the data via the COM port, where the data will be displayed, and if required, stored.

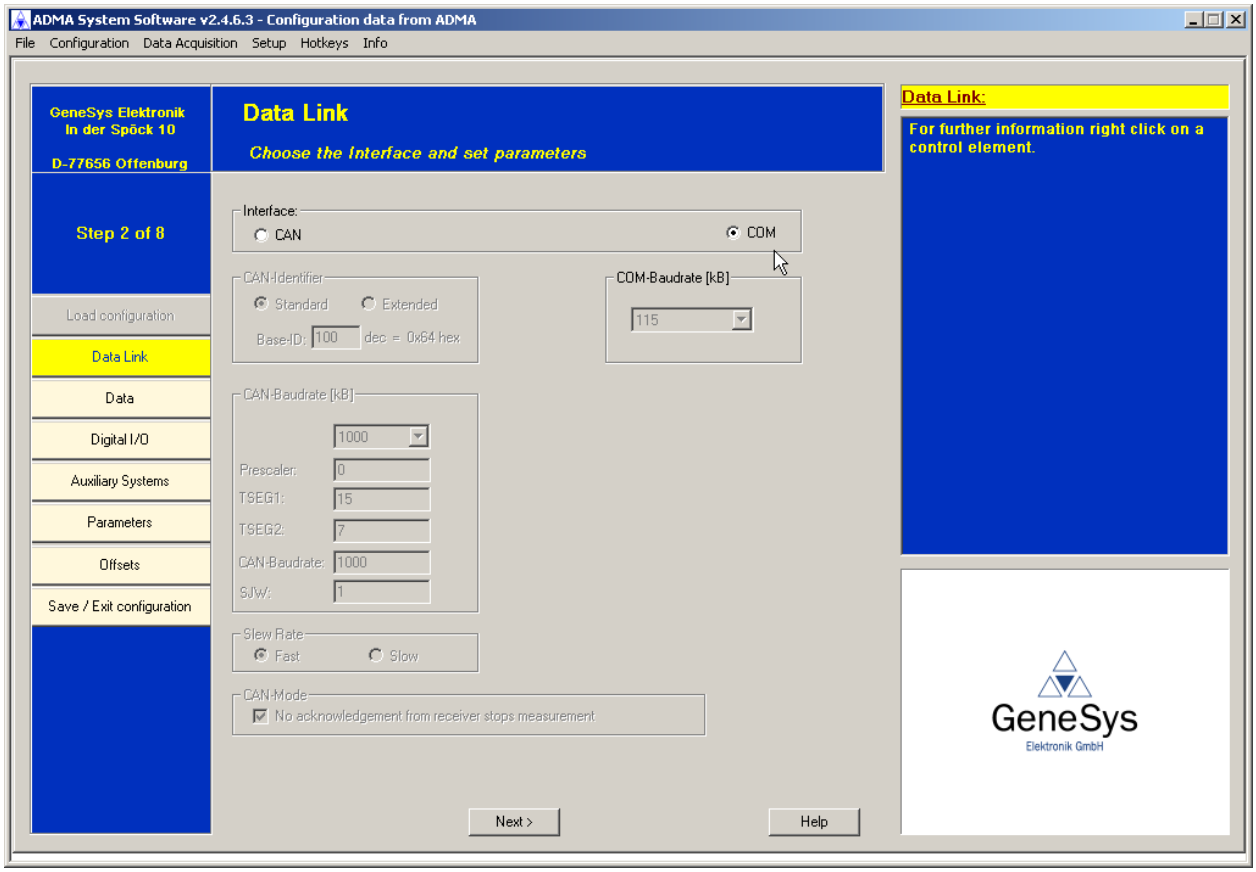

Figure 4 Dialog: Data Link

3.3.4. Selection of data packets to be transmitted

The *Data* dialog is used to individually select the data packets to be transmitted by the ADMA. Data packets which are not required can be deactivated in order to reduce the transmission data volume. The following data packets need to be selected for the function test:

- Rates (Body)
- Rates (Horizontal)
- Acceleration (Body)
- Acceleration (Horizontal)
- Tilt / Heading

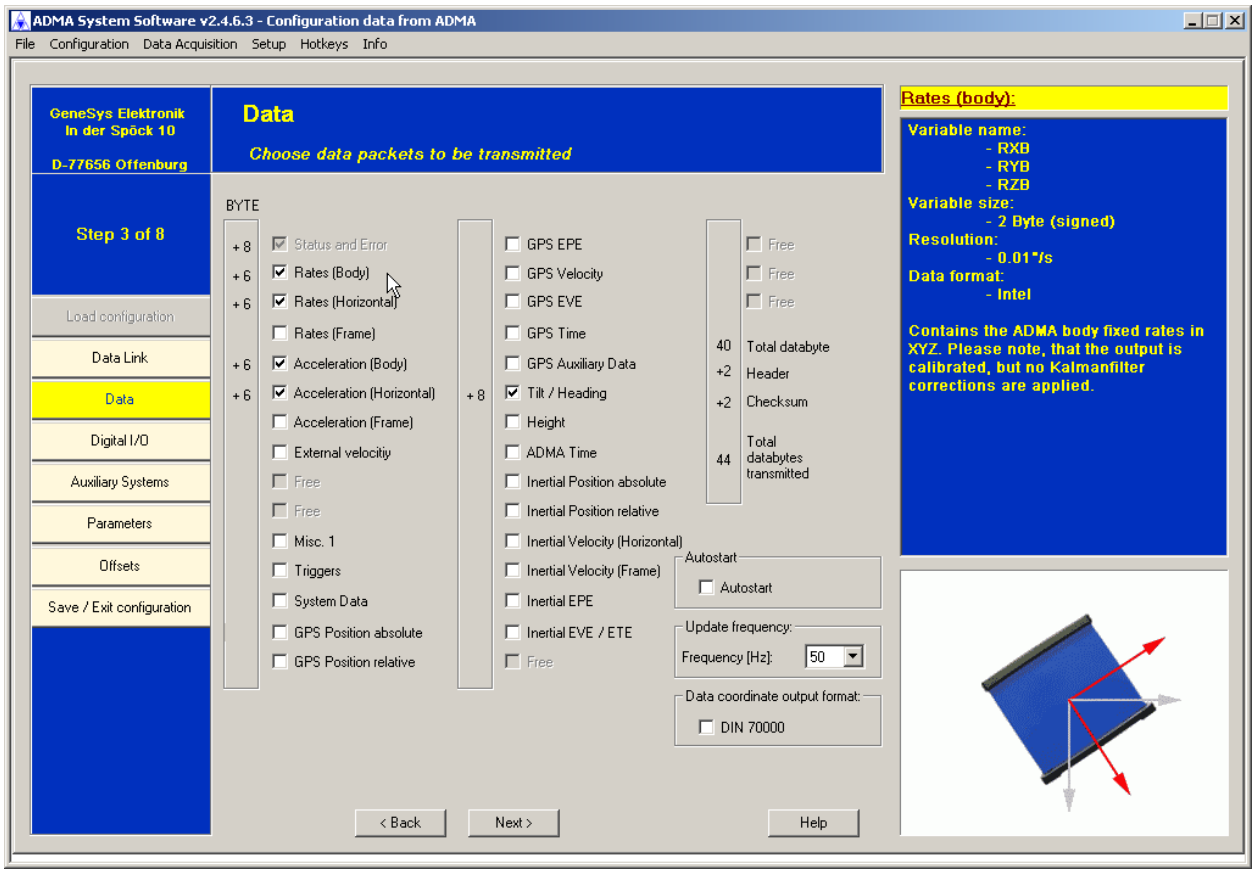

Figure 5 Dialog: Data

With this dialog other settings can be changed such as the *Data coordinate output format*, the *Update frequency* and the *Autostart* mode.

The following settings are needed for the function test:

- Deactivate the *DIN 70000* option in the field labelled *Data coordinate output system*
- Set the *Update frequency* to 50 Hz (upper limit for most PCs with COM data transfer)
- Please deactivate the *Autostart* option

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.3.5. Auxiliary systems

This dialog is used to specify parameters related to auxiliary systems such as speed measurement systems and GPS receivers.

For the function test, it is necessary to deactivate all auxiliary systems as described below:

- Select the *No GPS* option from the *GPS Model*" drop-down menu in the field labelled *GPS*
- Deactivate the *x-Signal active* option in the field labelled *Velocity*

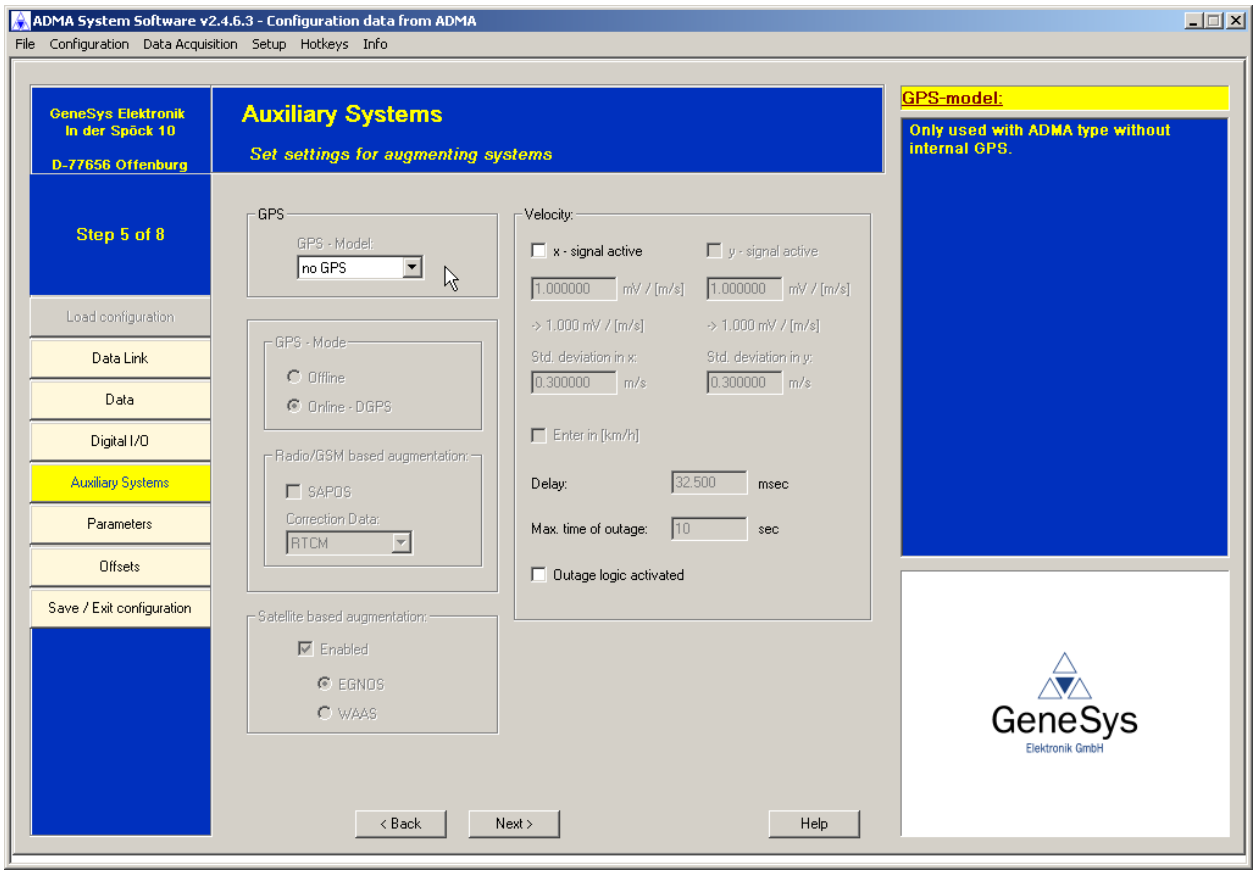

Figure 6 Dialog: Auxiliary Systems

3.3.6. Parameter

The dialog *Parameter* is used to specify the system behaviour. For the function test only the parameter *Prealignment* is important. Please enable prealignment and specify a duration of 10 seconds.

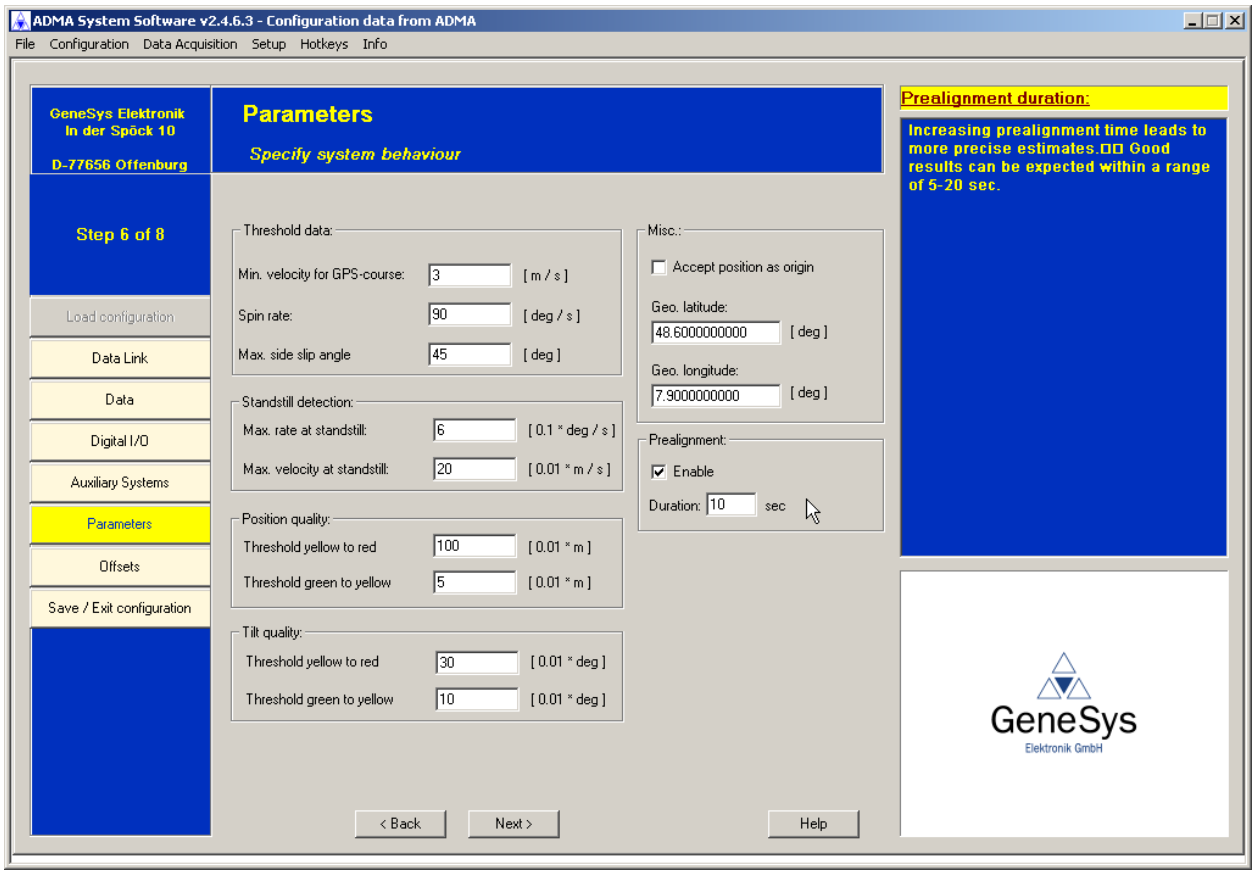
ADMA System Software v2.4.6.3 - Configuration data from ADMA
File Configuration Data Acquisition Setup Hotkeys Info
GeneSys Elektronik
In der Spöck 10
D-77656 Offenburg
Parameters
Specify system behaviour
Step 6 of 8
Load configuration
Data Link
Data
Digital I/O
Auxiliary Systems
Parameters
Offsets
Save / Exit configuration
Threshold data:
Min. velocity for GPS-course: 3 [m / s]
Spin rate: 90 [deg / s]
Max. side slip angle 45 [deg]
Standstill detection:
Max. rate at standstill: 6 [0.1 * deg / s]
Max. velocity at standstill: 20 [0.01 * m / s]
Position quality:
Threshold yellow to red 100 [0.01 * m]
Threshold green to yellow 5 [0.01 * m]
Tilt quality:
Threshold yellow to red 30 [0.01 * deg]
Threshold green to yellow 10 [0.01 * deg]
Misc.:
Accept position as origin
Geo. latitude:
48.6000000000 [deg]
Geo. longitude:
7.9000000000 [deg]
Prealignment:
Enable
Duration: 10 sec
Prealignment duration:
Increasing prealignment time leads to more precise estimates. Good results can be expected within a range of 5-20 sec.
GeneSys
Elektronik GmbH
< Back
Next >
Help

Figure 7 Dialog: Parameters

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.3.7. Transmitting modified settings to ADMA

The altered settings now need to be transmitted to the ADMA. For this purpose, click in the left frame the *Save / Exit configuration* button.

The following dialog *Save configuration* will open with different options to save the altered settings. Please note, that exiting the configuration modus without saving is possible too. Please select the option *Save settings in ADMA* and confirm with the *Save / Exit configuration mode* – button. This commences data transmission.

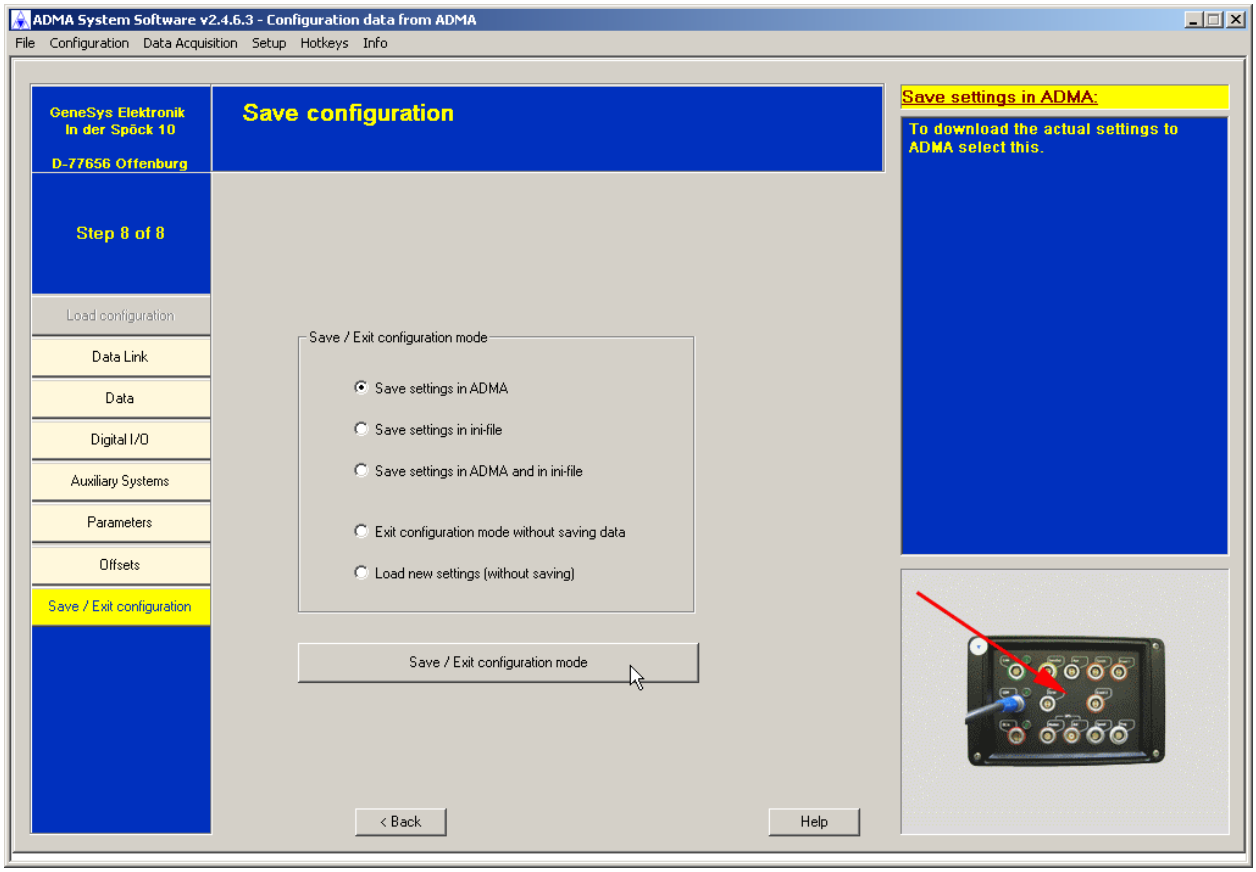

Figure 8 Dialog: Save / Exit configuration

The modified configuration can be saved for further tests on the hard disk. For this purpose, choose the option *Save settings in ini-file*.

If you want to save the altered configuration both in the ADMA and in ini-file please select the option *Save settings in ADMA and in ini-file*.

After choosing an option and confirming with the button *Save / Exit configuration* the configuration mode will be closed and the program will return to the main menu.

3.4. Starting a measurement

To start a measurement, select *Data Acquisition – Start Measurement* from the ADMA System Software's main menu.

Figure 9 Start Measurement item in main menu

This invokes the window shown below:

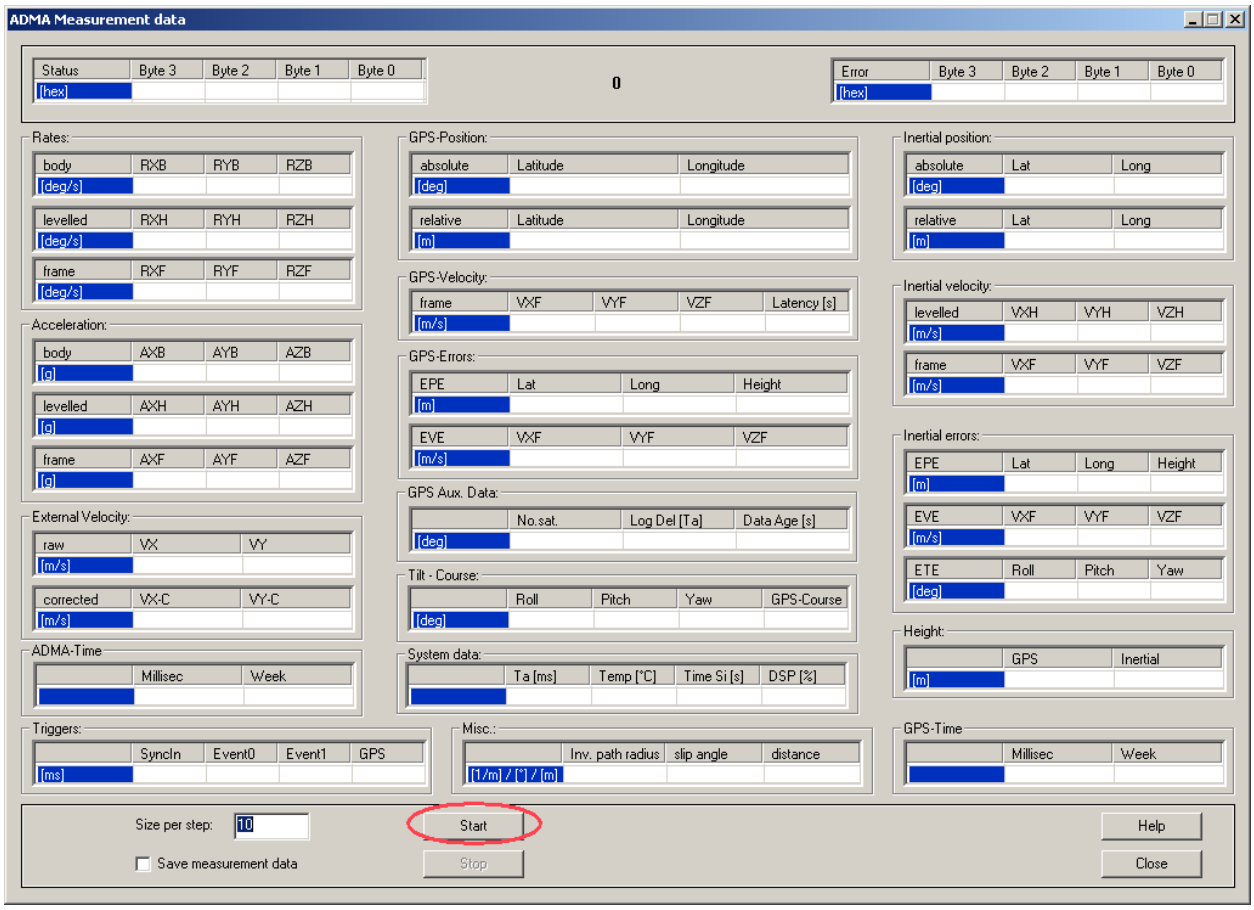

Figure 10 Dialog: ADMA Measurement data

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

After clicking the *Start* button, the following dialog is displayed. You can enter

- Start course [deg] and
- Prealignment [sec]

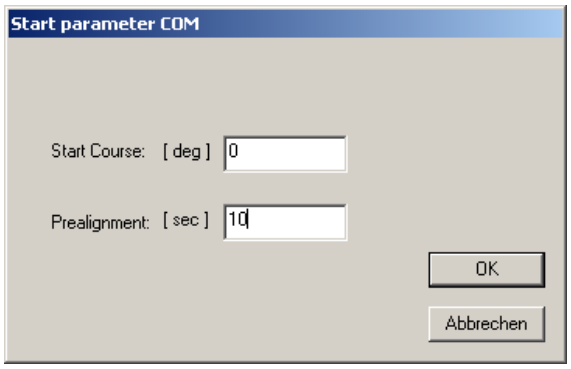

Figure 11 Dialog: Start parameter for Measurement

On requirement these two parameters can be changed. After confirming the entries with *OK* the measurement starts.

Because prealignment has been activated, the initial display consists of the status and selected, reset data packets. Prealignment is indicated in the system status field by a corresponding flag, together with the *Count* variable which indicates the time remaining to the end of the pre-alignment process.

Important --- do not move ADMA while prealignment is in progress!

Pre-alignment in progress is indicated as shown below.

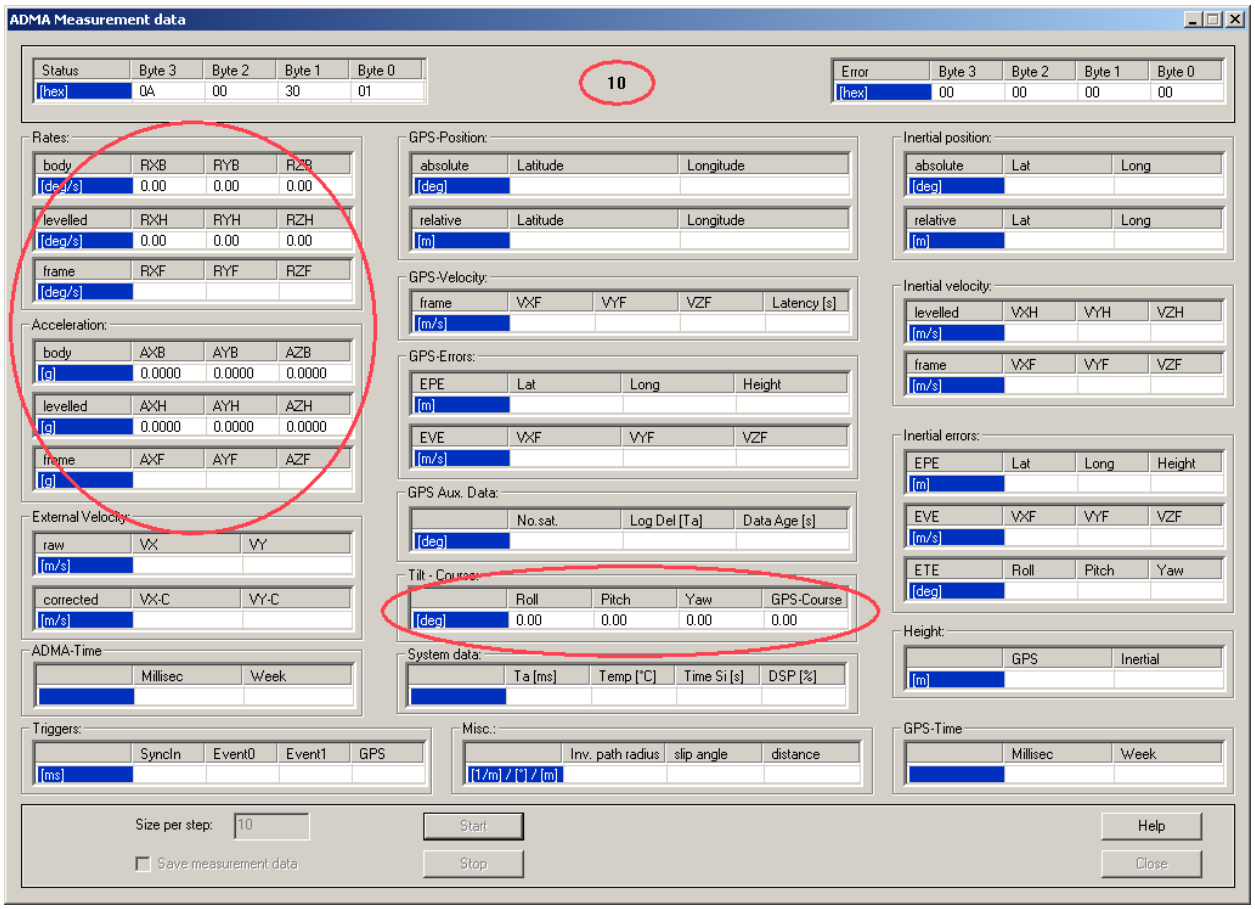

Figure 12 Dialog: Mesurement in prealignment mode

Once pre-alignment is complete, the ADMA switches automatically to the measurement mode and starts to transmit current measurement data.

Important --- The Kalmanfilter will need some to settle.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.5. Static test

3.5.1. Transient condition of the *Kalman filter*

The *Kalman filter* of the ADMA can be active without auxiliary systems like an external velocity or a (D)GPS (in standstill), it's possible to experience transient effects in the first few minutes (<120 seconds). After this transient phase stable values are shown. This transient phenomenon in the beginning of a initiated measurement is inherent with the *Kalman filter's design* and can only be temporal compressed, however not eliminated.

3.5.2. Checking the system status

The system status indicates the system's states as well as elementary errors. During correct measurement, this status should indicate AHRS mode* (status byte 1, bit 5 = 0x20).
Furthermore, the *Count* status variable is incremented by one each time a new data record is transmitted (status byte 3). Once the maximum displayable figure of 255 has been reached, the transmission count is resumed from 0.

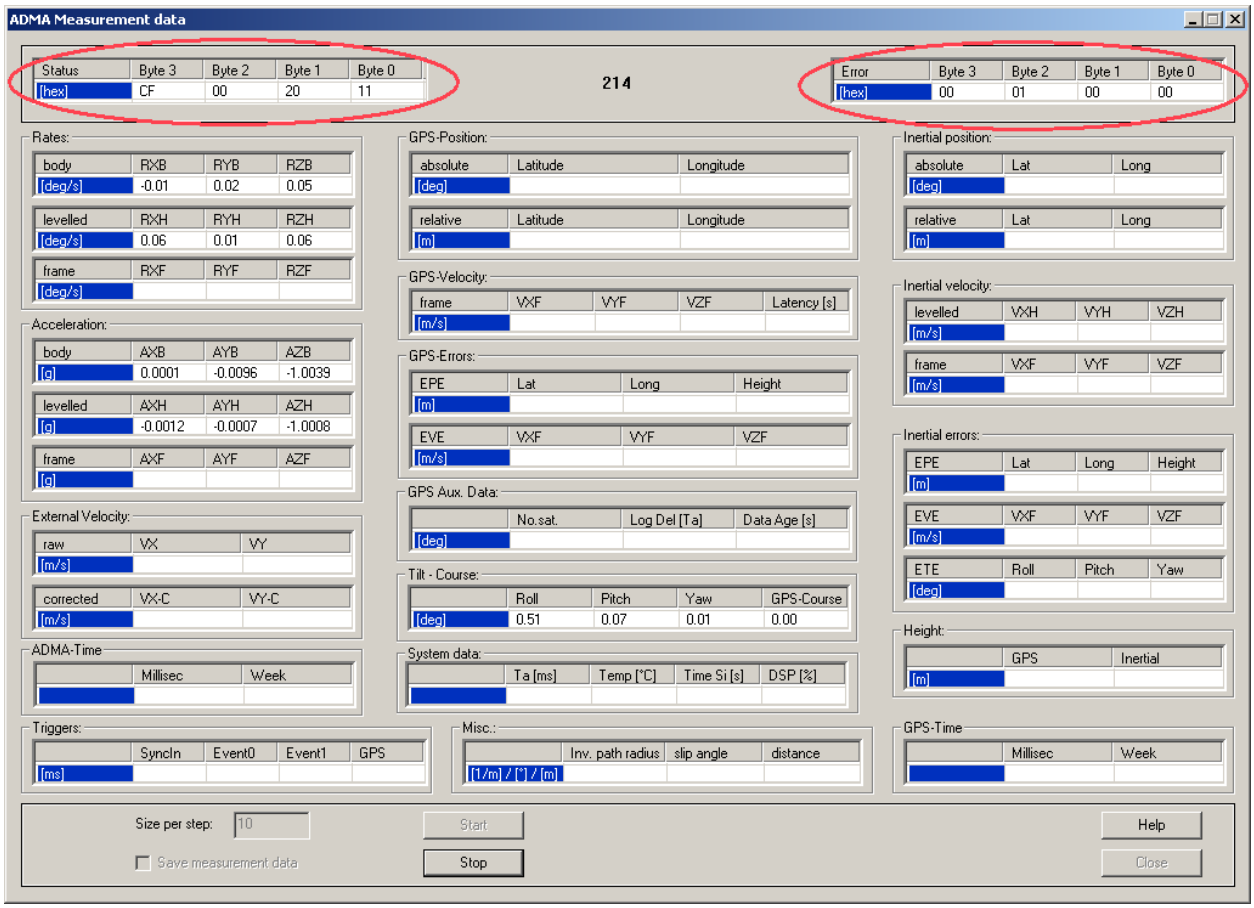

Figure 13 Dialog: Measurement - Check of system status

If an error bit is set (error bytes 0 and 1), measurements are no longer valid. In this case, please contact our service department.

*

AHRS = Attitude and Heading Reference System
AHRS-mode = Only solid angles are indicated (no position or speed)

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.5.3. Checking displayed orientation

When the system is at rest and nearly horizontal, the following *Tilt-Course* data should be indicated:

- Roll ≈ 0°
- Pitch ≈ 0°
- Course ≈ 0 ° or 360°

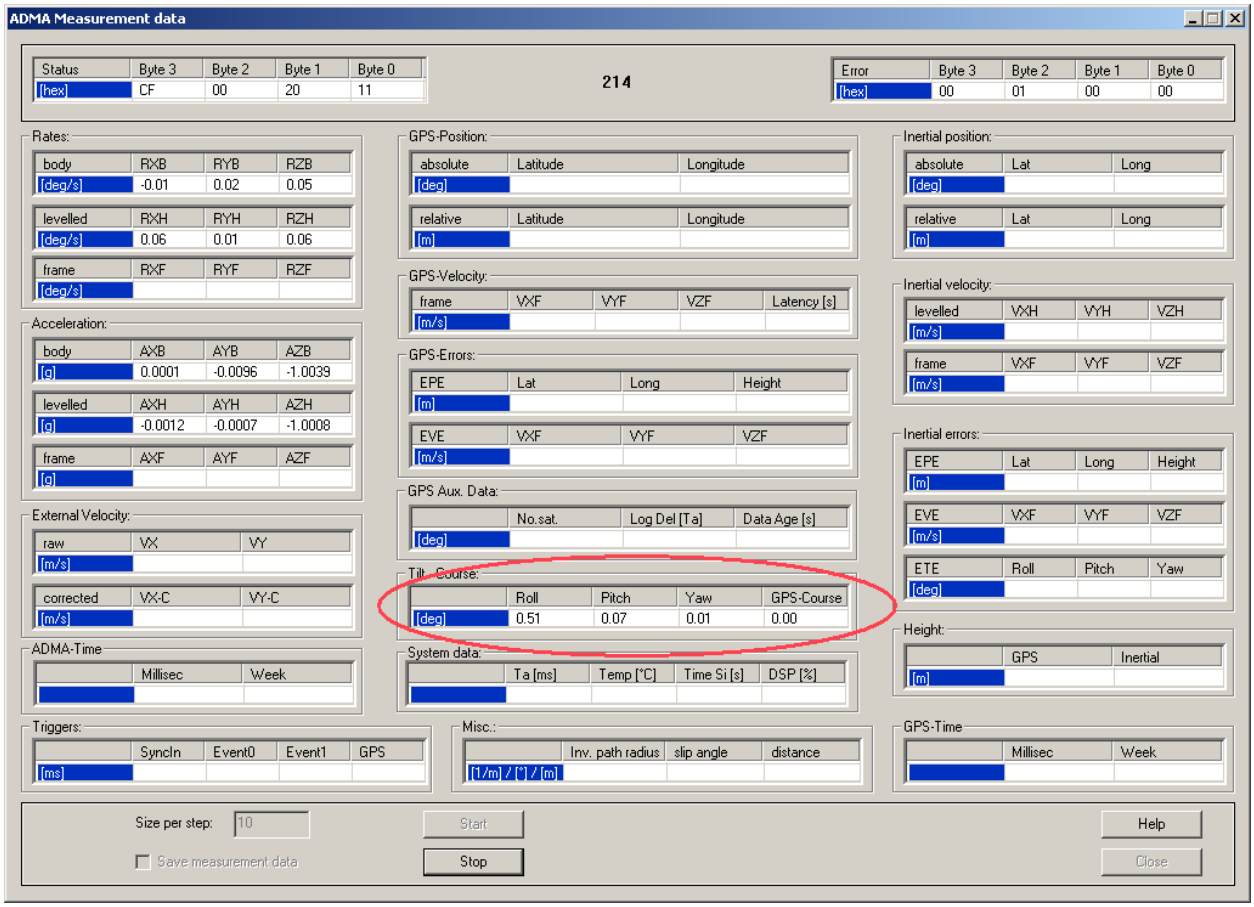

Figure 14 Dialog: Measurement - Check of displayed orientation

3.5.4. Checking displayed rotational speeds

In a static state, the following rotational speeds should be indicated:

- X-axis ≈ 0°/s
- Y-axis ≈ 0°/s
- Z-axis ≈ 0°/s

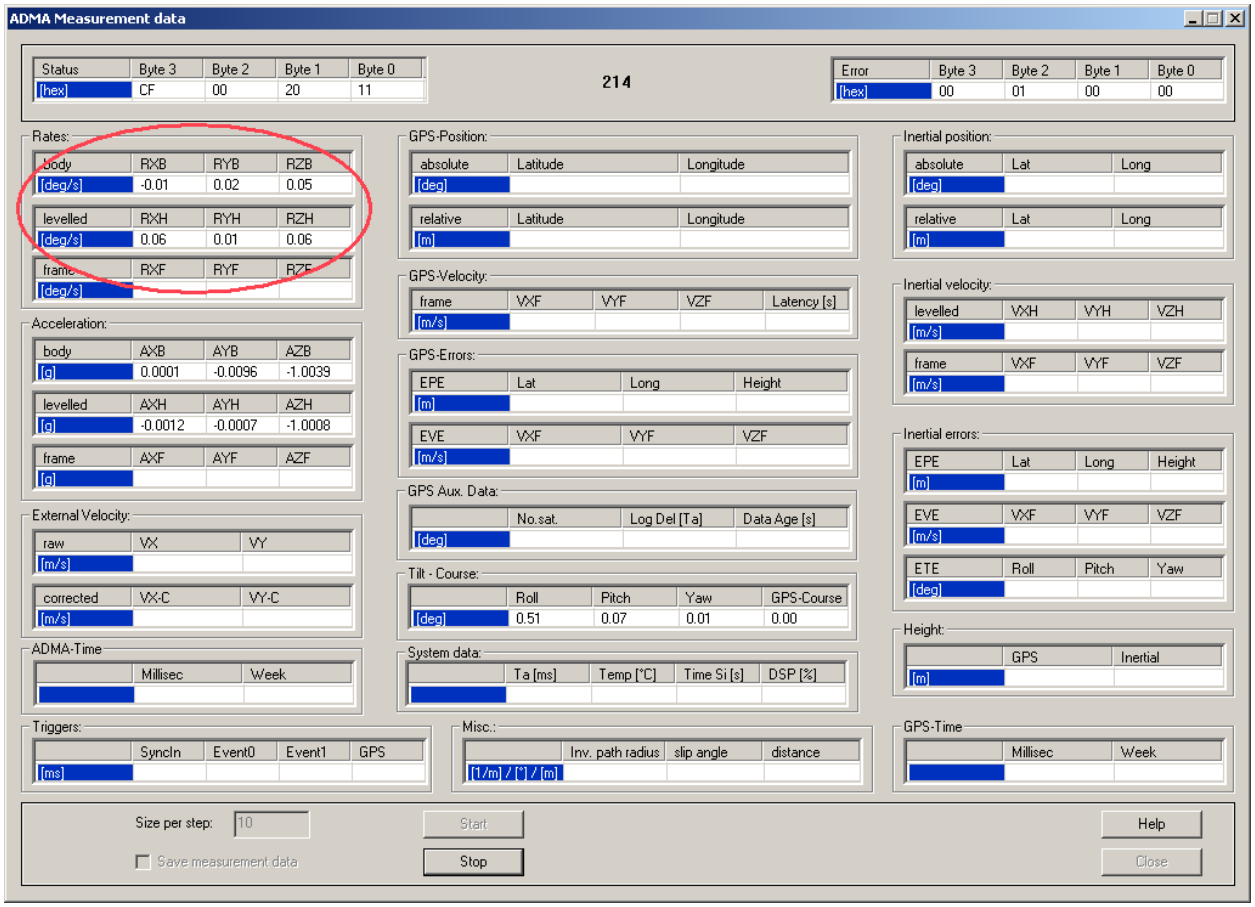

Figure 15 Dialog: Measurement - Check of displayed rates

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.5.5. Checking the displayed accelerations

The ADMA should be positioned on a laboratory bench or similar facility, thus being placed on a close to horizontal surface. The following body-fixed accelerations should then be indicated:

- X-axis ≈ 0 g
- Y-axis ≈ 0 g
- Z-axis ≈ -1 g

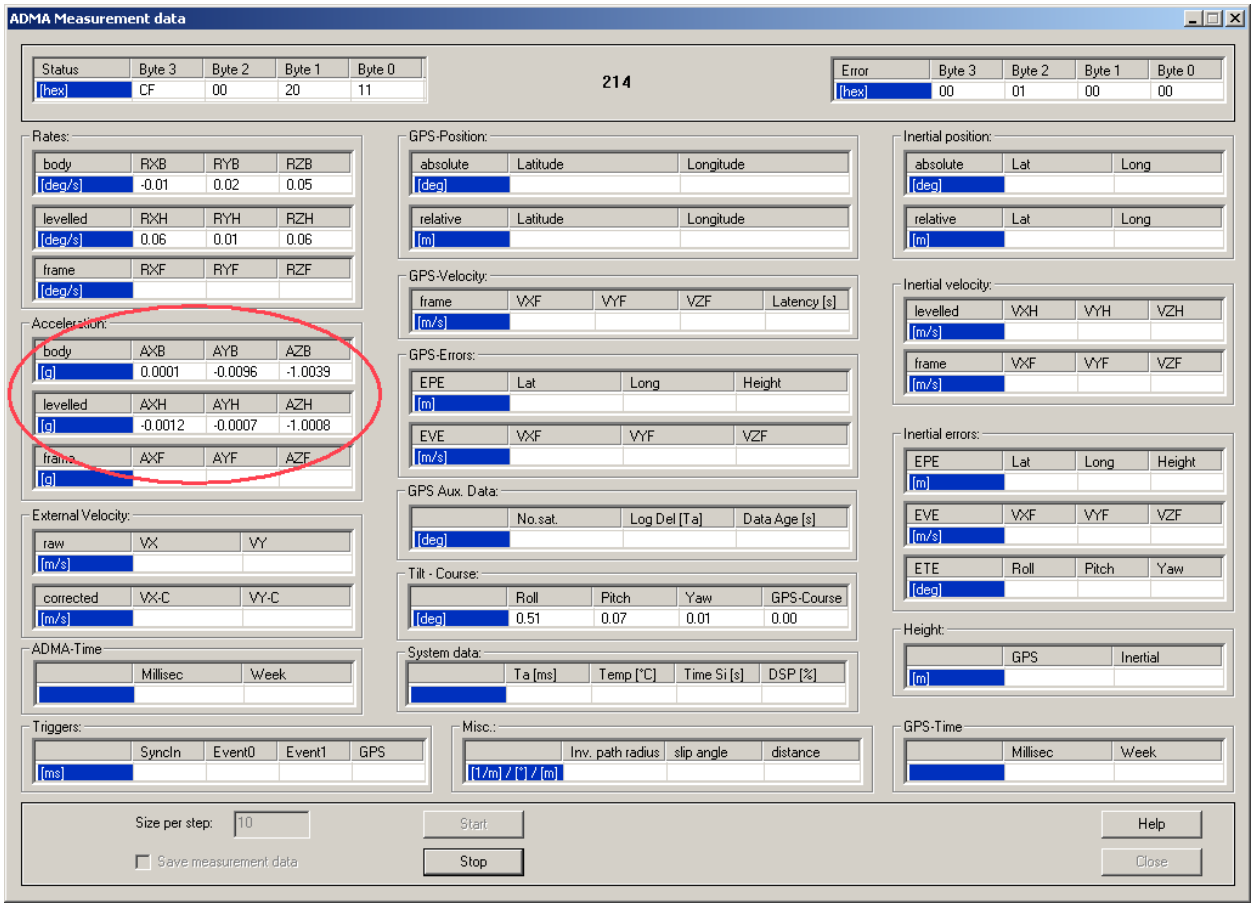

Figure 16 Dialog: Measurement - Check of displayed accels

3.5.6. Stoping a measurement

Click on the *Stop* and *Close* buttons in succession.

3.6. Dynamic test

3.6.1. Test procedure and data display

As part of the dynamic test, the ADMA undergoes defined linear and rotary motion, i.e. along or about the systems sensor axis. The rotational speeds are checked first, beginning with the X-axis (roll), followed by the Y and Z axes, followed by the acceleration check in the same sequence of axes.

For easier analysis, the data can be saved and processed with an appropriate software tool. If you want to save the data explicitly, click on the *Save measurement data* option in the measurement mode window. When starting a measurement with the *Save measurement data* activated, a dialog will open asking a file name.

While a measurement is in progress, the acquired data is saved in binary format. On completion of the measurement with the *Stop* button, the measurement data to be evaluated will be converted automatically to ASCII format.
Overall 3 files are created:

- Filename.dat Data in binary format
- Filename.prn Data in ASCII format
- Filename_PrnList.txt Description of the individual columns of the file *filename.prn*

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

3.6.2. Checking the rotational speeds

Start a measurement with the storage option activated as described above. After prealignment, the system is rotated about the individual measurement axes in the sequence X, Y and Z. The plotted data could look like this:

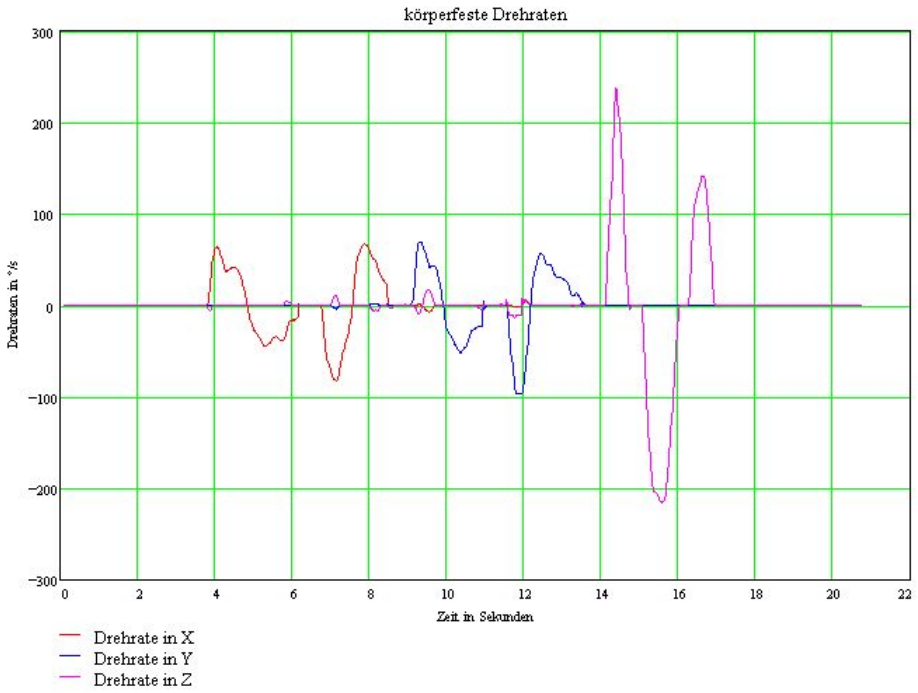

Diagram 1 Plot - rates

This data plot shows that ADMA detects negative as well as positive rotational speeds about all three measurement axes.

3.6.3. Checking accelerations

Start another measurement with the storage option activated as described above. After prealignment, the system is moved linearly along the individual axes in the sequence X, Y and Z. The plotted data could appear as follows:

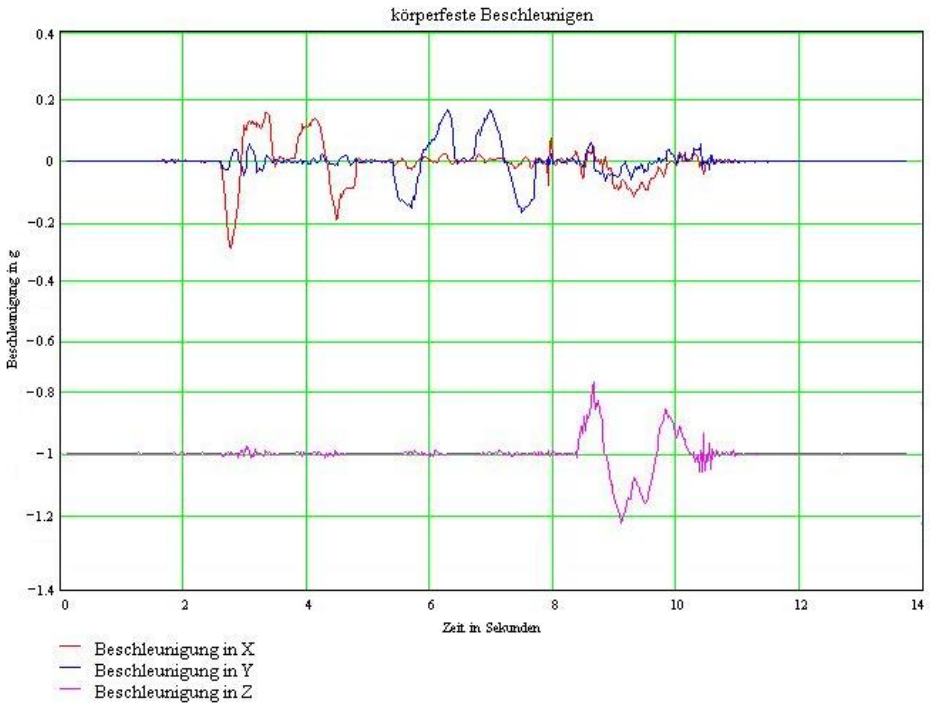

Diagram 2 Plot - Accelerations

This data plot shows that ADMA detects negative as well as positive accelerations along the three measurement axes.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

4. Installation and cabling inside the vehicle

4.1. Operational configurations

Any of three operational configurations is available in accordance with the involved vehicle test and required accuracy of data: Stand-alone, ADMA with external speed signal and ADMA with (D)GPS. The diagram below depicts these three configurations.

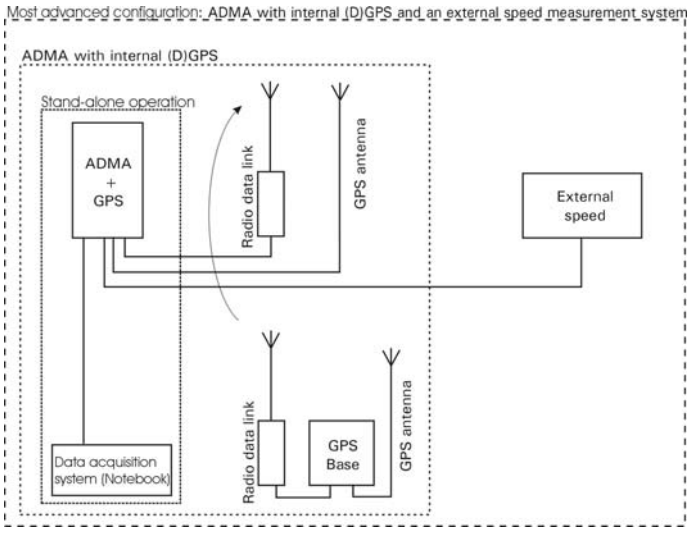

Figure 17 Configuration facilites: ADMA-G with internal GPS-Rover

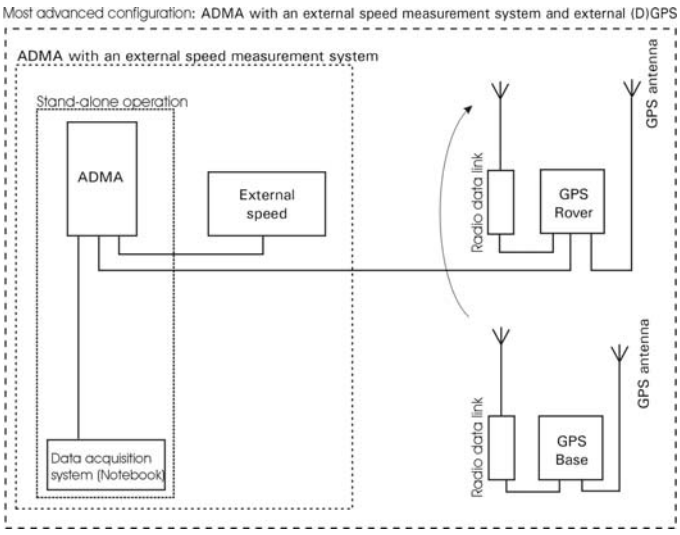

Figure 18 Configuration facilities: ADMA-G with external GPS-Rover

Note that although the operational configuration involving ADMA with a (D)GPS does not necessarily require an external speed signal, such a signal proves especially useful in situations susceptible to GPS failure.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

4.2. Point of installation

4.2.1. ADMA

The ideal installation point for a gyro system inside a vehicle is at the theoretical centre of motion, with the system's measuring axes parallel to those of the vehicle.

If installation at the centre of motion is not possible, the ADMA system needs to be positioned at a point inside the vehicle more conducive to installation. In this case, the selected point should preferably lie on one of the axes or on a plane formed by two axes and containing the centre of motion (for example, in the boot, on the vehicle's longitudinal axis passing through the centre of motion).

The ADMA's ideal position of installation in a vehicle is one in which the ADMA's measurement axes align with those of the vehicle, i.e. where the X measurement axis is parallel to the vehicle's longitudinal axis. It is difficult to actually achieve this ideal situation, so that the resulting discrepancy in alignment needs to be compensated. Section 5.3 cont. describes how to compensate discrepancies in the ADMA's installation position and alignment.

4.2.2. External speed measuring system

Usually, the external speed measuring system is attached to one side of the vehicle. For slalom tests involving a higher risk of damage to the sensor, a point at the front / rear of the vehicle can be used.

4.2.3. GPS antenna

If the ADMA is operated together with a GPS receiver, the GPS antenna must be mounted on the vehicle's roof to ensure a clear line of sight to GPS satellites. The ideal position for the antenna is one offering a clear view of the entire sky, from the zenith to the horizon..

If the installation point on the vehicle's roof can be freely selected, it is advisable to select a point directly above the ADMA. This is where the vector to the ADMA's installation point is at it's shortest and the effects of pitching and rolling at a minimum. Compensation of the GPS antenna's installation point is described in Section 5.3.3.

4.2.4. Modem and modem antenna

If the ADMA is operated together with a GPS receiver in the RTK-DGPS mode (also termed local-area DGPS), it is also necessary to employ a wireless / GSM modem for receiving correction data from the base station.
In most cases, the modem's IPxx protection type is not sufficient for external mounting on the vehicle, so that the modem unit needs to be mounted inside the vehicle, while only the modem's antenna is fastened on the roof.

Please note:
Wireless modems which usually transmit over a 433 / 868-MHz band need a direct line of sight to the base station's radio antenna in almost all cases, and therefore should be installed as high as possible on the vehicle's roof.
This does not apply to GSM modems, which are capable of maintaining contact with the base station even under adverse conditions without a direct line of sight.

4.3. Cabling

After mounting in/on the vehicle is complete, it is necessary to lay the ADMA cables required for operation. Based on the minimal configuration, the available operational variants are described below. Additional information on connection possibilities and the ADMA sockets is provided in the technical description.

4.3.1. ADMA in stand-alone mode (minimal configuration)

Connect the *ADMA-Power* cable's red-coded Lemo-plug to the *DC In* ADMA socket and turn on the power supply. Depending on system design, the nominal supply is 12, 24 or 42 VDC. The *DC In* LED should come on as a result.
Afterward, connect the *ADMA-COM* communication cable's blue-coded Lemo-plug to the *COM* ADMA-socket and the other end of the cable to the COM interface of your measurement data acquisition device.

If you want to perform measurements via the CAN bus, connect the *ADMA-CAN* communication cable's green-coded Lemo-plug to the *CAN* ADMA socket and the other end of the cable to the CAN interface of your measurement data recorder (made by Vector or Softing, for instance).

4.3.2. ADMA in stand-alone mode - optional connections

The minimal configuration for operating ADMA is supplemented by additional terminals which might prove useful for some other measurements. These include the *SyncOut* output as well as the *Event 1* and *Event 2* inputs which are extremely suitable for establishing chronological references during a measurement. Such references can comprise, for example, a lap index, lane entrance or circular travel index. A detailed description of the signals and associated cables is provided in the technical documentation.

4.3.3. ADMA and external speed measurement

ADMA can read in analog speed signals - including 2-axis signals - via the *Speed* terminal. For this purpose, connect ADMA to the speed sensor via the appropriate *ADMA-Speed* cable.

Please do not forget the power supply for the speed sensor.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

4.3.4. ADMA and GPS

If the ADMA is to be operated with a GPS, all the cables for the GPS receiver should be connected first. Connect the receiver by means of a coaxial cable with the GPS antenna; usually, the receiver is attached to the roof by means of a magnetic base.

If the GPS receiver is to be operated in the DGPS mode, a modem is needed to receive correction data. A wireless or cellular modem is employed, depending on the transmission paths involved. The receiver is connected to the modem, which is connected to its antenna. Note that the GPS receiver as well as the optional modem need to be supplied with power.

In case of ADMA-G with internal GPS-receiver the GPS antenna has to be connected with the ADMA via a coaxial cable. As a rule the GPS antenna is mounted on the roof with a magnetic base.

To use the DGPS-mode of the GPS-receiver a modem is required to receive correction data. This can be either a wireless- or a GSM-modem. Connect the ADMA modem output with the modem and the modem with it's modem antenna. Please note, that the ADMA supplies the modem with voltage.

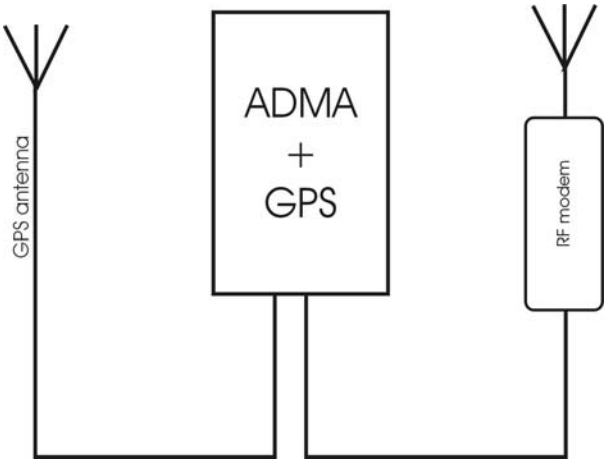

Figure 19 ADMA-G with internal GPS receiver

In case of ADMA with external GPS-receiver the GPS receiver has to be connected with the GPS antenna via a coaxial cable. As a rule the GPS antenna is mounted on the roof with a magnetic base.

To use the DGPS-mode of the GPS-receiver a modem is required to receive correction data. This can be either a wireless- or a GSM-modem. Connect the ADMA modem output with the modem and the modem with it's modem antenna. Please note, that both the GPS-receiver and the optional modem need to be supplied.

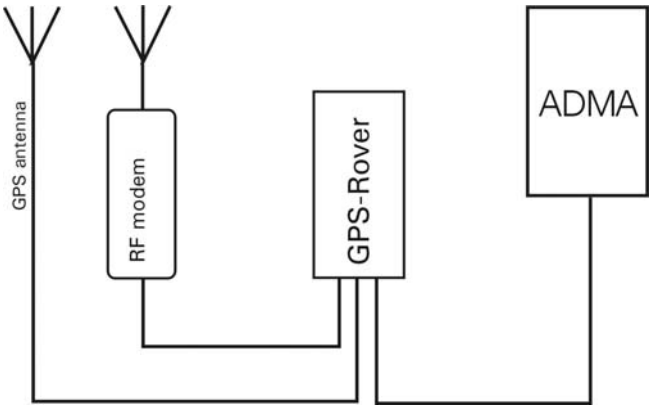

Figure 20 ADMA with external GPS receiver

4.3.5. ADMA and DGPS with a separate base station

The separate base station is set up similar to the installation of an external GPS receiver in the vehicle, except that in the case of a mobile station, a PC or laptop communicates with the base. There are two different GPS base models available. Besides a standard GPS base GeneSys also offers an all-weather housing for accommodating all the essential components of a base station. In this case just simply connect the housing's integrated sockets to the GPS antenna, modem antenna, communication cable for setup, and power supply cable.

The standard base setup is displayed below.

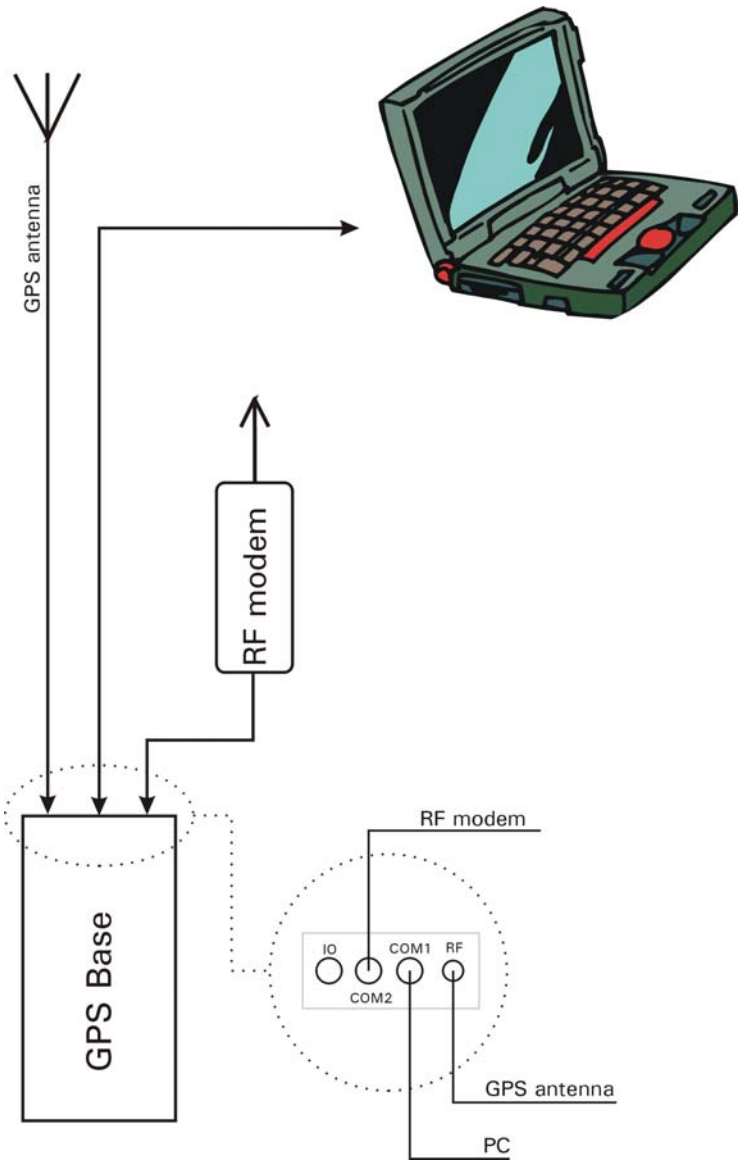

Figure 21 GPS base station: Pin assignment of the basic design

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

5. Setting up the ADMA in the vehicle

5.1. Modify threshold for standstill detection

The following describes standstill detection thresholds and their correct entry, which will increase the data integrity. The parameters for the *Standstill detection* (Max. rate at standstill, Max. velocity at standstill) are very important parameters, as standstill allows a special form of augmentation for use with the *Kalman filter*, the so called *Zero-Velocity-Update*. This variant of the *Kalman filter update* increases the stability of the measurement mode in case of standstill.

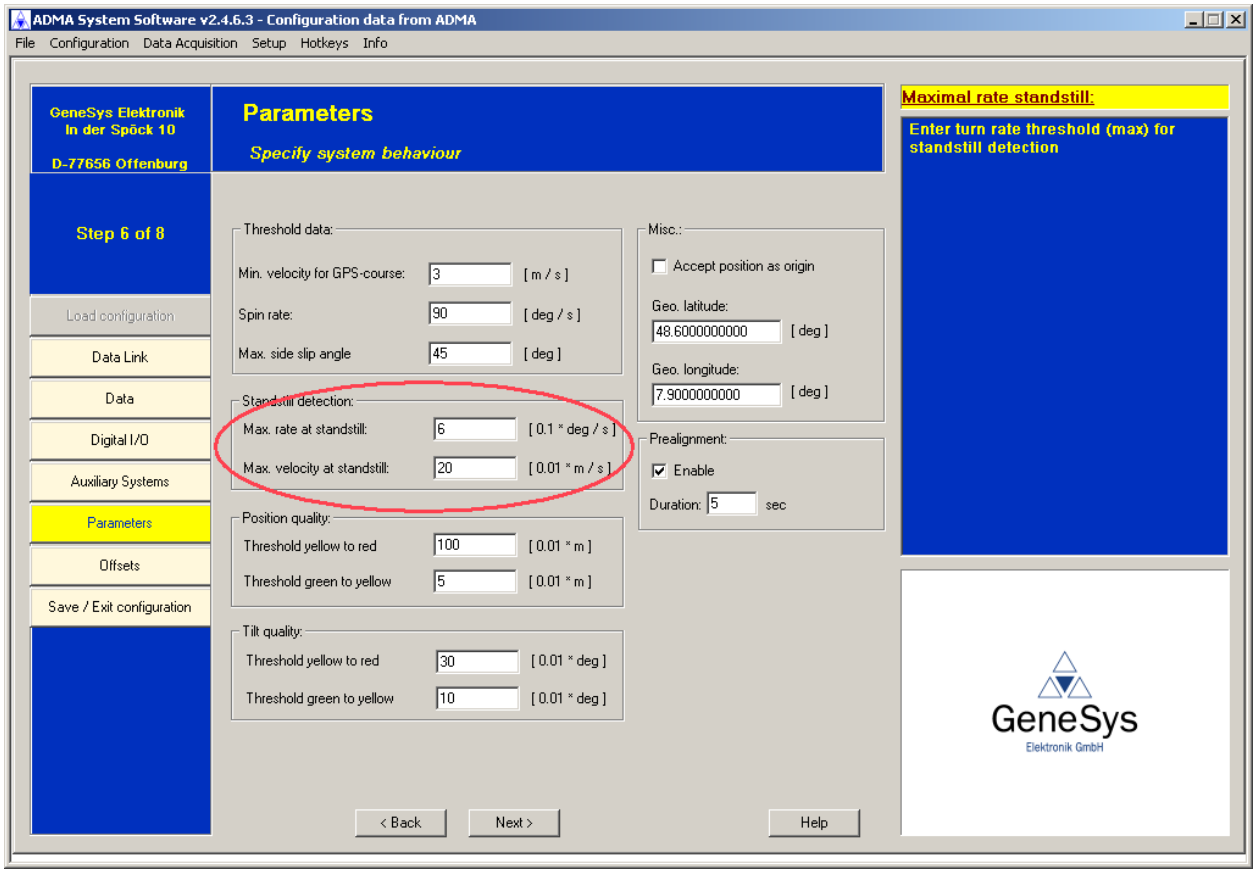
ADMA System Software v2.4.6.3 - Configuration data from ADMA
File Configuration Data Acquisition Setup Hotkeys Info
GeneSys Elektronik
In der Spöck 10
D-77656 Offenburg
Parameters
Specify system behaviour
Step 6 of 8
Load configuration
Data Link
Data
Digital I/O
Auxiliary Systems
Parameters
Offsets
Save / Exit configuration
Threshold data:
Min. velocity for GPS-course: 3 [m / s]
Spin rate: 90 [deg / s]
Max. side slip angle 45 [deg]
Standstill detection:
Max. rate at standstill: 6 [0.1 * deg / s]
Max. velocity at standstill: 20 [0.01 * m / s]
Position quality:
Threshold yellow to red 100 [0.01 * m]
Threshold green to yellow 5 [0.01 * m]
Tilt quality:
Threshold yellow to red 30 [0.01 * deg]
Threshold green to yellow 10 [0.01 * deg]
Misc.:
Accept position as origin
Geo. latitude:
48.6000000000 [deg]
Geo. longitude:
7.9000000000 [deg]
Prealignment:
Enable
Duration: 5 sec
Maximal rate standstill:
Enter turn rate threshold (max) for standstill detection
GeneSys
Elektronik GmbH
< Back
Next >
Help

Figure 22 Dialog: Parameters - Standstill detection

5.1.1. Max. turn rate at standstill

The measured ADMA turn rates allow a good detection of vehicle standstill, as the measured rates of the vehicle are smaller in standstill the compared to those in dynamic operation. However the thresholds have to be checked and adapted, depending on the type of vehicle. This can best be done with a test measurement followed by a data analysis.

The special mode of the *Kalman filter* update via *Zero-Velocity-Update* is available in all operation modes, however in solo-operation (no external velocity / no (D)GPS) only the turn rates are used for standstill detection.

5.1.2. Max. velocity at standstill

If the ADMA is operated in a non-solo mode, then an additional check, against the (inertial) velocity, is performed for standstill detection. In that case both criteria (rate and velocity) need to be valid for the ADMA to indicate standstill detection.

5.2. Modify thresholds for quality

The position- and the tilt-status are implemented to have an easy way to display the ADMA system performance. The position- and tilt-status are based on the Kalman filter internal estimation of the state variable's quality (standard deviation). With 2 adjustable thresholds for each status it's possible to give a statement about the measurement's quality, which can be displayed in form of a traffic light design.
The threshold *green-yellow* seperates small from tolerable measurement errors, the threshold *yellow-red* tolerable from non-acceptable errors. Thus, GPS outage situations, where system performance degrades over time, are easily detected and appropriate actions can be taken while being out on the test track, etc.
Values for pos- and tilt-quality:

0 = *Red*
1 = *Yellow*
2 = *Green*

This functionality is also advantageous while in the transient phase of the *Kalmanfilter* at the beginning of a measurement. After a set time the status is switched active, changing from "red" to whatever the actual state is, normally to "yellow" or "green" state. This indication can be used to start data recording.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

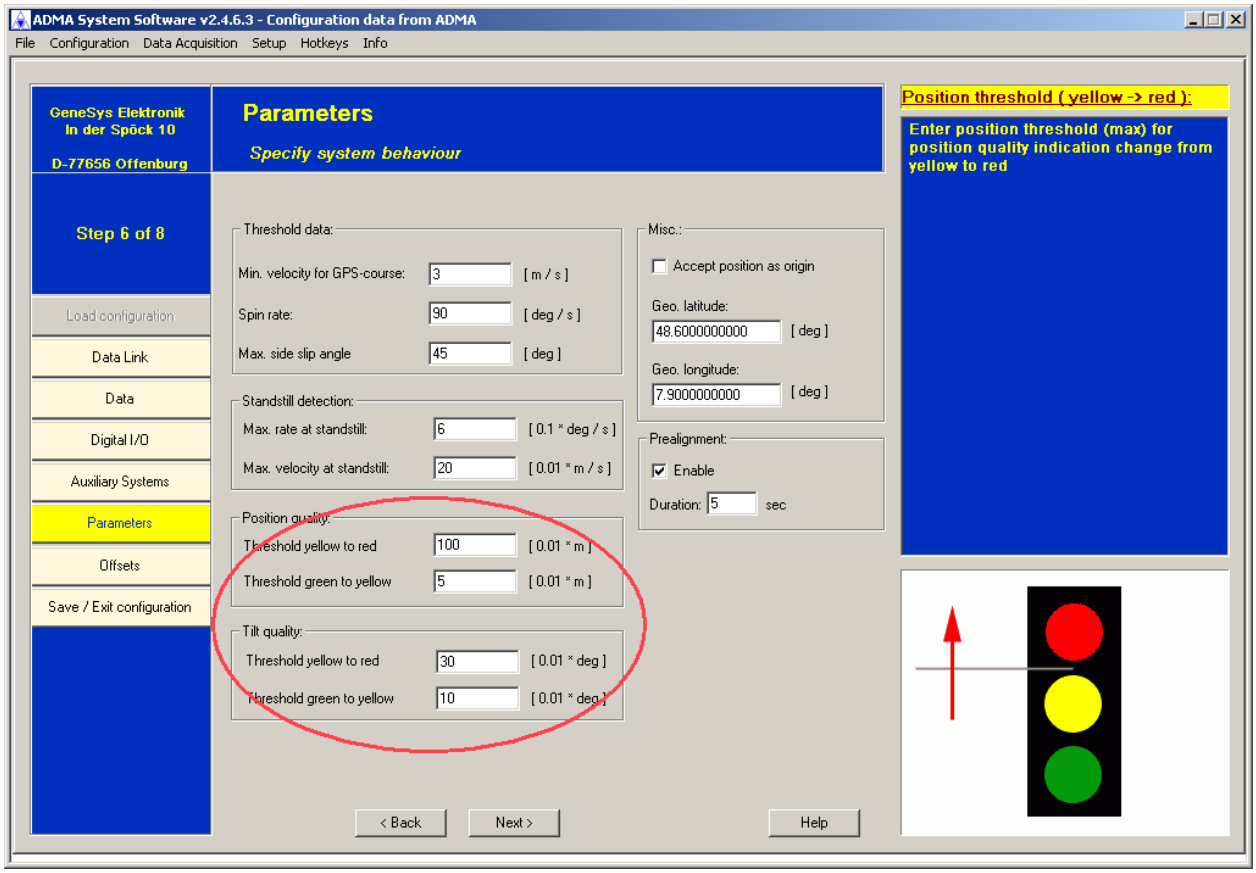
ADMA System Software v2.4.6.3 - Configuration data from ADMA
File Configuration Data Acquisition Setup Hotkeys Info
GeneSys Elektronik
In der Spöck 10
D-77656 Offenburg
Step 6 of 8
Load configuration
Data Link
Data
Digital I/O
Auxiliary Systems
Parameters
Offsets
Save / Exit configuration
Parameters
Specify system behaviour
Threshold data:
Min. velocity for GPS-course: 3 [m / s]
Spin rate: 90 [deg / s]
Max. side slip angle 45 [deg]
Standstill detection:
Max. rate at standstill: 6 [0.1 * deg / s]
Max. velocity at standstill: 20 [0.01 * m / s]
Position quality:
Threshold yellow to red 100 [0.01 * m]
Threshold green to yellow 5 [0.01 * m]
Tilt quality:
Threshold yellow to red 30 [0.01 * deg]
Threshold green to yellow 10 [0.01 * deg]
Misc.:
Accept position as origin
Geo. latitude:
48.6000000000 [deg]
Geo. longitude:
7.9000000000 [deg]
Prealignment:
Enable
Duration: 5 sec
Position threshold (yellow -> red):
Enter position threshold (max) for position quality indication change from yellow to red
< Back
Next >
Help

Figure 23 Dialog: Parameters – Quality (Pos and Tilt)

5.2.1. Threshold for position quality

The position quality is particularly of interest when (D)GPS is used. If the ADMA is operating with (D)GPS, the position error is expected to be within an error band, depending on the quality of the actual GPS position and the available GPS mode. If GPS data isn't available for a certain amount of time (e.g. due to GPS outage), then the ADMA position quality decreases due to the gyro system's own error dynamic, following a square function.

With decreasing quality the standard deviation of the signals will increase. In case the threshold is reached, this is shown accordingly (yellow, resp. red). Acceptable errors and thus their thresholds may vary with the application, and can be within the a possible error range of 0.1, 1, 5, 10 or even 20m. As an example, in case of crosswind influence tests the position measurement needs to be very exact and accordingly the limits must be set closely.

With the GPS re-entering after a GPS outage the position quality will increase again. This leads to smaller standard deviations of the ADMA position and thus effecting the position standard deviation.

Please note:
The position error can be reduced to a linear error behavior by using of an external velocity signal. Associated with this is a better expected position quality over the time.

5.2.2. Threshold for Tilt quality

In contrary to the position quality the tilt quality is of interest to most operation modes. It is advantageous that the tilt error only increases linear over the time. In cases of a (D)GPS outage a better error behavior can be expected in compared to those of the position.

5.2.3. Enter geo. latitude and geo. longitude

To operate the ADMA without (D)GPS the actual position can be defined in the configuration. With the correct entry of the geo. latitude the earth rate and the earth gravitational vector length can be calculated correctly.

If the ADMA is using (D)GPS the entered position can be used as the origin for the relative position grid (local tangent plane). To allow this option activate the checkbox *Accept position as origin (*for further information see the *Technical documentation)*. The relative position data output from the ADMA is referenced to this point. This is very suitable for repetitive tests, where recorded data sets have to be compared. (path following tests or steering influence tests).

Please note:
Some test setups with DGPS might take more than a day or test campaigns might have to be run over a longer period of time, but the users could find themselves in the situation to remove the base station at the end of the day. In case of measurements in RTK-DGPS mode (up to 2cm) the exact position of the base station antenna needs to be saved and marked to meet the requirements of comparability.

Additionally, at the first day of a measuring campaign the exact position of the base station antenna should be determined, if no known position is available (also see GPS base documentation for saving measured GPS base positions).

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

5.3. Compensating the installation position

Normally the ADMA, the GPS antenna and external speed sensor can't be mounted at the same spot - as we would like to - but at different positions in or outside the vehicle. The GPS antenna is usually mounted on the roof, the ADMA in the vicinity of the centre console or in the boot, and the speed sensor on the vehicle's side, front or rear. Radar sensors are sometimes also mounted underneath the vehicle. The distance between the individual components is termed "lever arm".

As a consequence, the position measured by the GPS antenna does not correspond to the virtual measuring point (reference point: **P**oint **O**f **I**nterest). An uncompensated lever arm also causes roll, pitch and course changes to be registered as errors in the form of position discrepancies.

Furthermore, the speed measured at the installation position of the external speed sensor is not equal to the speed at the virtual measuring point. While the vehicle is travelling through a corner or in a circle, the speed measured by a sensor mounted on the vehicle's outer side is higher than the speed measured in the middle of the vehicle or on the inside of the vehicle.

Installation positions are compensated by specifying a position vector (GPS antenna and external speed sensor relative to virtual measuring point). This vector is entered and edited under the *Offsets* dialog in the ADMA System Software. For determination of the installation position a folding rule or reference tape is completely adequate.

Please note:
The vector is based on the coordinate system defined by DIN 70000. Additional details are provided in ADMA's technical description.

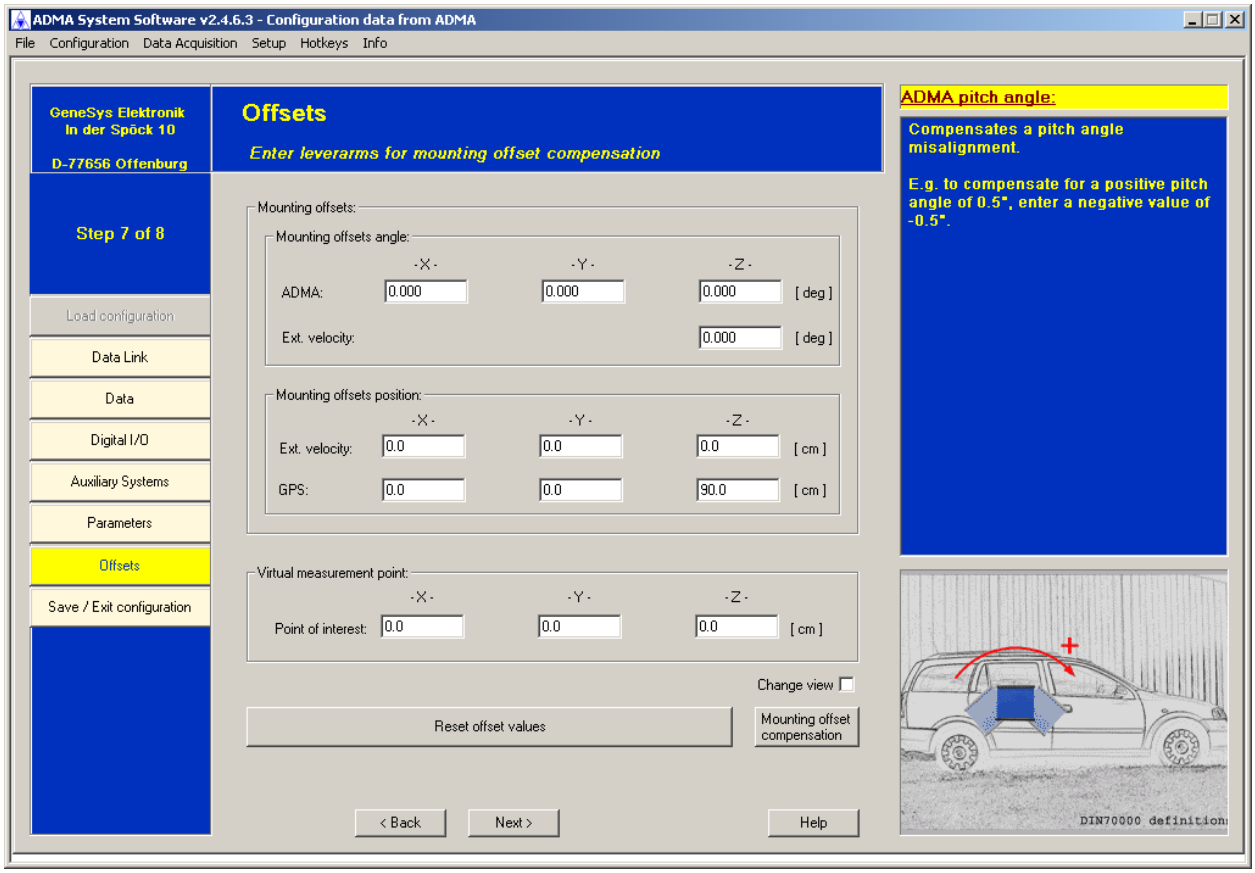

Figure 24 Dialog: Offsets

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

5.3.1. Virtual measuring point (point of interest)

If the ADMA isn't mounted in the *virtual measurement point (***P**oint **O**f **I**nterest)*,* then a lever arm exists between the reference point and the installation position of the ADMA. This lever arm can be compensated by entering the lever arms of the *virtual measurement point*.

The entry should be made correspondent to the coordinate system DIN70000 in [cm]:

- X (positive in travel direction)
- Y (positive leftward with respect to direction of travel)
- Z (positive upward)

Please note:
This compensation is only valid, if the assumption is met that the car turns around a virtually fixed axes and the movement of this axes in the horizontal plane is insignificant relative to the vehicle. However this compensation is incorrect, if the axis doesn't fulfil the above mentioned condition. For example, this could happen in driving situations like spinning or drifting. In this cases the axis moves obviously.

5.3.2. External speed measuring system

The position vector for compensating speed data refers to the virtual measuring point and consists only of the components:

- X (positive in travel direction)
- Y (positive leftward with respect to direction of travel)

The Z-component is not of significance to compensation.

The compensation of the external connected velocity to the reference point effects the calculation of the inverse path radius and the side slip angle, if no GPS is connected.

5.3.3. GPS antenna

The position vector for the GPS antenna consists of all three components and refers to the virtual measuring point.

5.4. Compensating an ADMA misalignment

5.4.1. ADMA misalignment

As described earlier, an exact alignment of the ADMA's measurement axes with the vehicle's axes is rarely achieved. However, it is possible to mathematically compensate for such alignment errors. Compensation values can entered in the *Offsets* dialog in the ADMA System Software.

5.4.2. Horizontal compensation of a ADMA misalignment

Bring the vehicle into the desired reference orientation and start a measurement with ADMA. The longer the selected pre-alignment time, the more precise the estimation of the roll and pitch offsets will be. Once pre-alignment is complete, the displayed roll and pitch values indicate the angular discrepancies betwenn the ADMA's and the chosen reference orientation.
Enter these two values in the fields designated *X* (roll axis) and *Y* (pitch axis) in the section labelled *Mounting offset angles*.
Once these parameters have been successfully transmitted to ADMA, horizontal angles are compensated accordingly during subsequent measurements.

Please note:
If the ADMA is operated only with an external velocity signal, then the position calculation is made via dead reckoning methods. The dead reckoning calculates the position with integrated velocity and the course angle. The height can be calculated accordingly, but in this case using the pitch angle instead of the course angle. However the pitch angle misalignment must be compensated for the height measurement to be acceptable.

5.4.3. Compensation of ADMA's vertical axis misalignment

The ADMA's Z-axis misalignment with respect to its longitudinal axis cannot be ascertained as easily as the horizontal angles.

One alternative is to perform a setup test involving longitudinal acceleration produced in stop&go travel. The ADMA's z-axis misalignment about its vertical axis causes the levelled acceleration acting along the X-axis to produce a component along the Y-axis as well. This relationship can be used to compute an angle of misalignment on the basis of the measured data. Similar to the horizontal angles, the obtained value is entered in the *Z* field of the section labelled *Mounting offset angles*.
If not executed carefully, this method can give rise to errors.

5.4.4. Compensation of vertical-axis misalignment of a 2-axis speed sensor

If a 2-axis speed sensor - for instance, one made by Corrsys - is employed, its mounting can be rotated. The corresponding misalignment can only be determined during a straight-ahead run. Similar to the misalignment in the case of the ADMA, a misalignment causes the vehicle's X-axis speed to produce a component along the sensor's Y-axis. This data can be used to calculate the angle of misalignment. The obtained value is entered in the field *Ext. velocity* in the section labelled *Mounting offset angles*.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

6. Configuring ADMA's measurement mode

6.1. System settings

Use the ADMA system software to configure the system as required for your tests. The following items are parametrized here:

- Data interface and (in the case of CAN) advanced options
- Sampling frequency, prealignment time, autostart, etc.
- Additional digital inputs / outputs
- Existent auxiliary systems such as external speed measurement modules or GPS

For further information about this settings, use the interactive help described in chapter 3.3.1. In addition to these settings, it is necessary to account for data volumes and resultant memory loading occurring during prolonged measurement runs. Once all these steps have been taken, measurements can be properly started.

6.2. Starting a measurement

Basically there are 4 possibilities to start a measurement:

- Start a measurement via the main menu's item *Start measurement* in ADMA System Software
- Start a measurement via the main menu's item *Remote Start* in ADMA System Software
- Start a measurement via the *Autostart* mode
- Start a measurement via a user specific tool

6.2.1. *Start measurement* in the ADMA System Software

In this case the ADMA measuring mode is started with the System software via the COM port. Before starting a measurement please enter the *start course* and the *prealignment* in the displayed dialog. The measurement will starts directly after this. For further information about these 2 parameters have a look at the following chapters 6.2.5 and 6.2.6.
The dialog *ADMA measurement data* appears and the parameters are displayed.

6.2.2. *Remote Start* in ADMA the System Software

Remote Start starts a measurement, in which the data is output via the CAN port. For this purpose select *CAN* port in dialog *Parameter* in configuration mode. Before starting a measurement please enter the *start course* and *prealignment* in an displayed dialog. For further information about these 2 parameters have a look at the following chapters 6.2.5 and 6.2.6. The dialog *ADMA measurement data* appears and the data are displayed.

6.2.3. *Autostart* mode

The setting *Autostart* can be enabled in configurations dialog *Data.* If *Autostart* is activated, the ADMA automatically starts data aquisition after power on. Whether the data is transmitted viar CAN- or COM-interface, depends on your choice in configurations dialog *Interface*. In this case, the 2 parameters *start course* and *prealignment* can't be modified. The saved values of the configuration settings are used.

6.2.4. Start a measurement via a user specific tool

Data acquisition can also be started via a user specific tool. The interface protocol for the COM- and CAN-interface is available on request, please contact us. Please refer in this case to the contact address on page 2.

6.2.5. Start course

If the ADMA id operated without GPS, this entry will asure that earth rate is compensated correctly, which otherwise will lead errors. If the ADMA is operating with (D)GPS, the transient duration of the *Kalman filter* can be reduced by entering a correct start course, but it's an option.

6.2.6. Prealignment

During prealignment the roll- and pitch angles are calculated from accelerometer data, while the vehicle is in standstill. The duration of the prealignment determines the expected precision of the angle estimation. Typical time periods are in the range of 5 – 30 seconds.

6.2.7. Transient phase of the *Kalman filter*

The transient phase of the *Kalman filter* can't be bypassed, as described above in chapter 3.5.1, and tasks ca. 120 seconds. However the Transient condition can be supported by the user of the ADMA. After prealignment, the *Kalman filter* converges faster, if the vehicle is moved in circles of *8*, or is zigzaged down a straight.

Important are driving conditions with accelerations. The vehicle can be driven *brisk* in this case, however spinning states should be avoided.

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

GeneSys Elektronik GmbH · In der Spöck 10 · D-77656 Offenburg · Tel. 0781 / 969279-0 · Fax 0781 / 969279-11 · mail@genesys-offenburg.de · www.genesys-offenburg.de

TABLE OF FIGURES

Figure 1 Setup an cabling 9
Figure 2 Menu of the ADMA System Software 11
Figure 3 Dialog: Load configuration 11
Figure 4 Dialog: Data Link 12
Figure 5 Dialog: Data 13
Figure 6 Dialog: Auxiliary Systems 14
Figure 7 Dialog: Parameters 15
Figure 8 Dialog: Save / Exit configuration 16
Figure 9 Start Measurement item in main menu 17
Figure 10 Dialog: ADMA Measurement data 17
Figure 11 Dialog: Start parameter for Measurement 18
Figure 12 Dialog: Mesurement in prealignment mode 19
Figure 13 Dialog: Measurement - Check of system status 20
Figure 14 Dialog: Measurement - Check of displayed orientation 22
Figure 15 Dialog: Measurement - Check of displayed rates 23
Figure 16 Dialog: Measurement - Check of displayed accels 24
Figure 17 Configuration facilites: ADMA-G with internal GPS-Rover 28
Figure 18 Configuration facilities: ADMA-G with external GPS-Rover 28
Figure 22 Dialog: Parameters - Standstill detection 34
Figure 23 Dialog: Parameters – Quality (Pos and Tilt) 36
Figure 24 Dialog: Offsets 39

TABLE OF DIAGRAMS

Diagram 1 Plot - rates 26
Diagram 2 Plot - Accelerations 27